

JSR


Supply Jet Diffuser

User Manual







1.

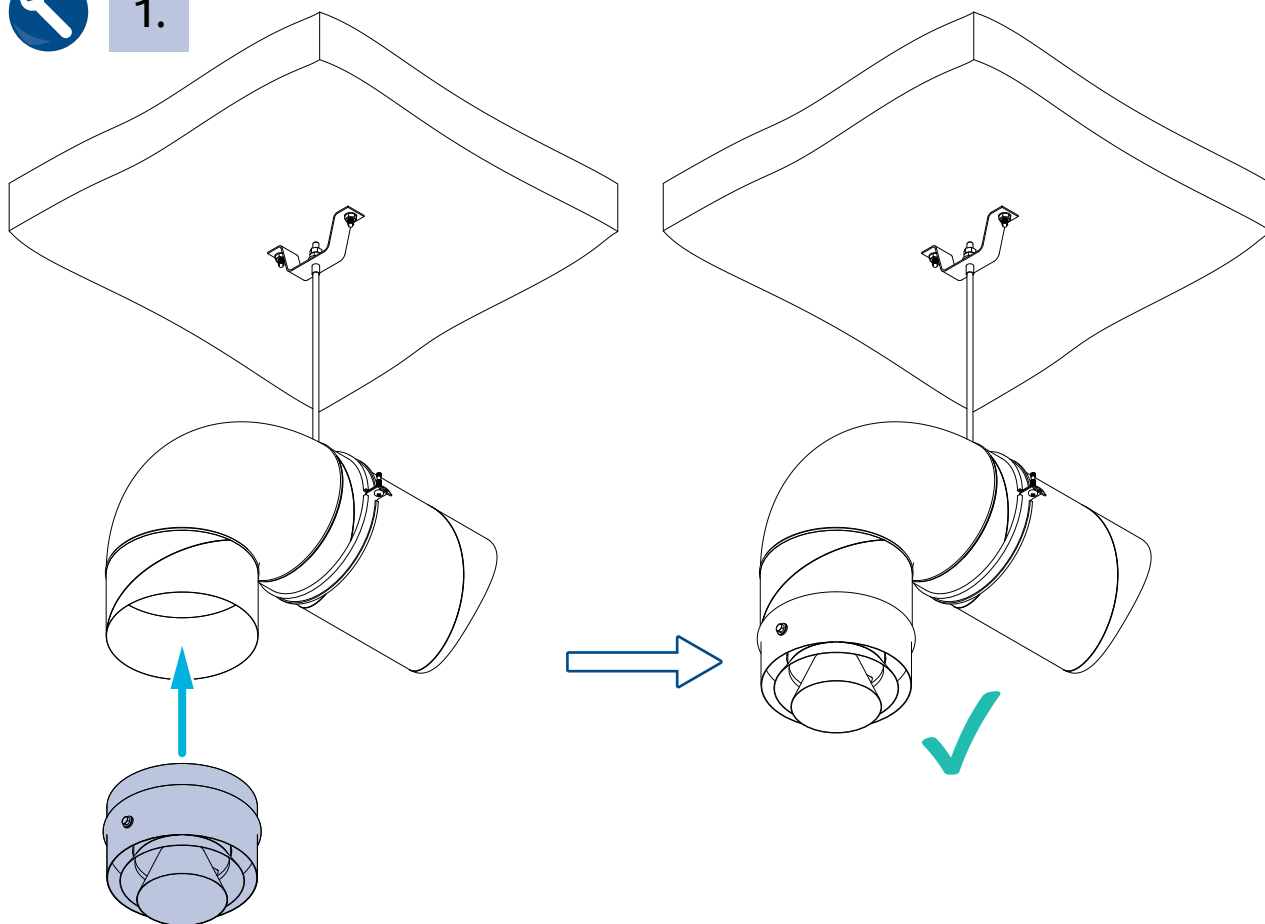



2.

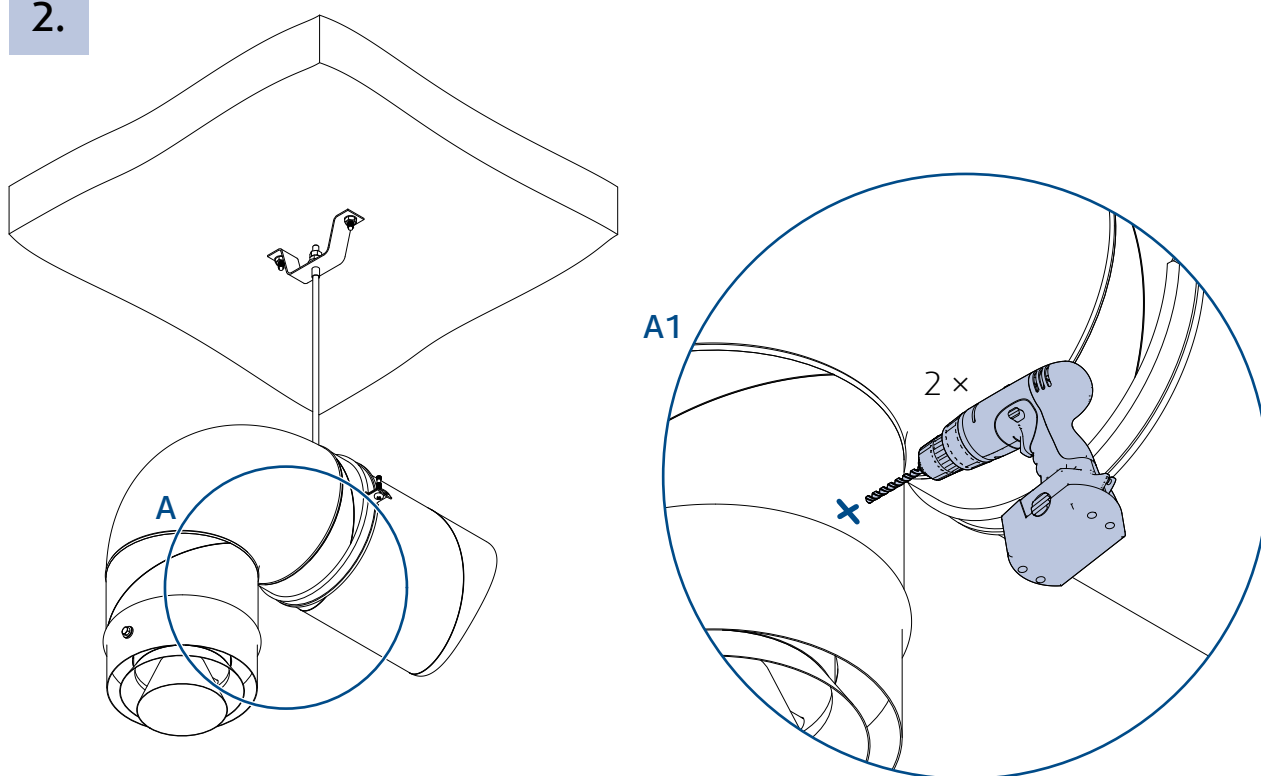

3.

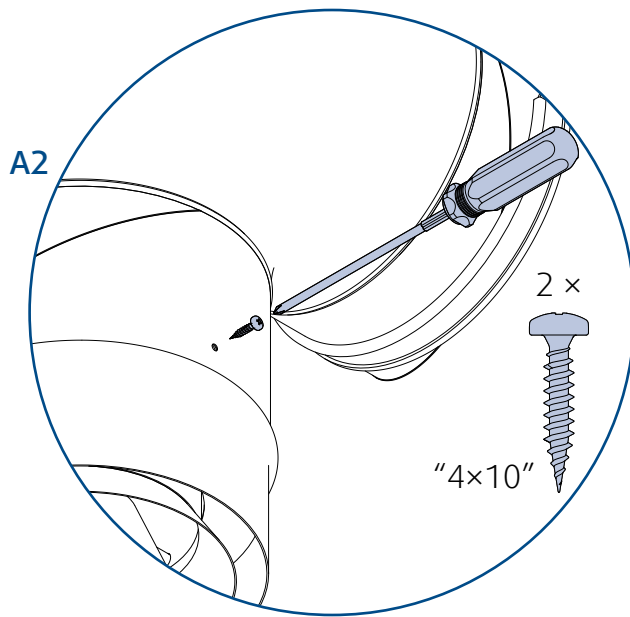


4.

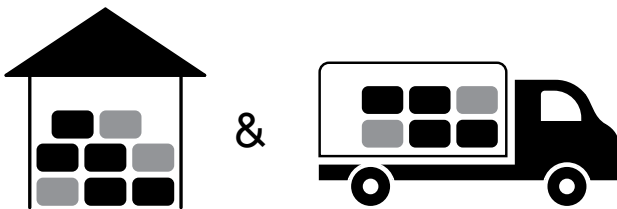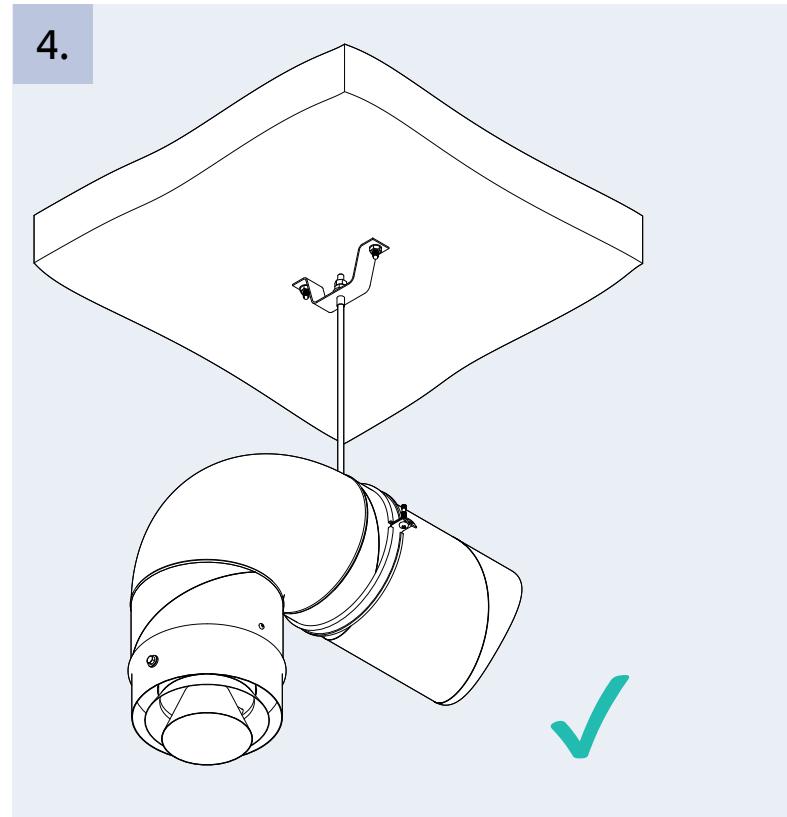

°C -40°C ... +50°C

% ≤ 95%

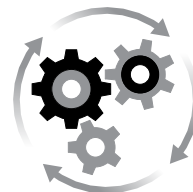

°C -10°C ... +50°C

% ≤ 95%

