



GT

Installation, maintenance and operation instructions

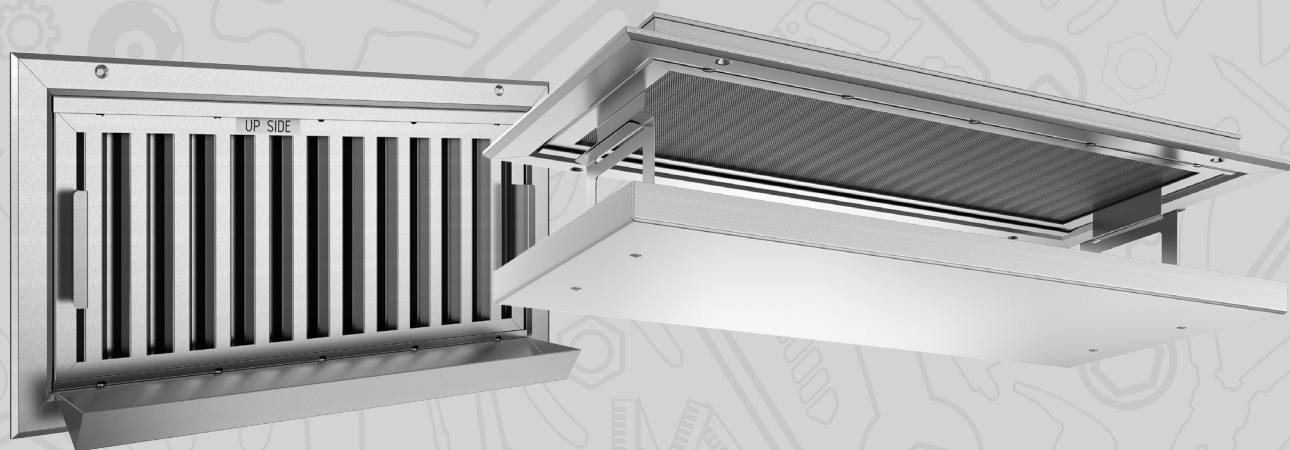


1.

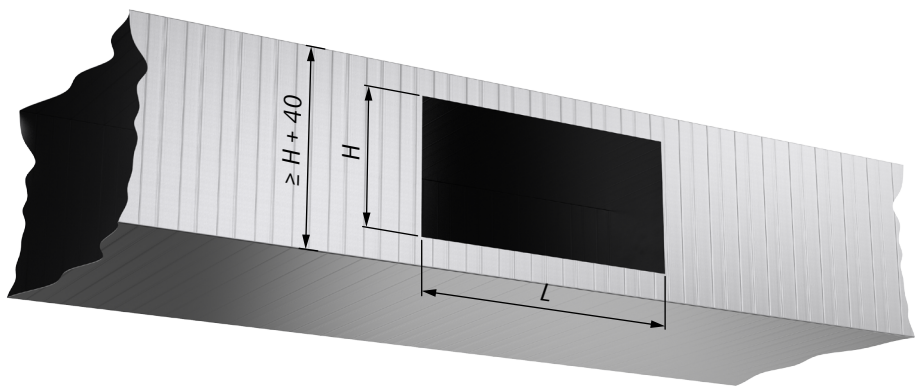


H	L				
	(mm)				
200	300	400	500	600	
225	325	425	525	625	
300	300	400	500	600	
325	325	425	525	625	
400	300	400	500	600	
425	325	425	525	625	



2.

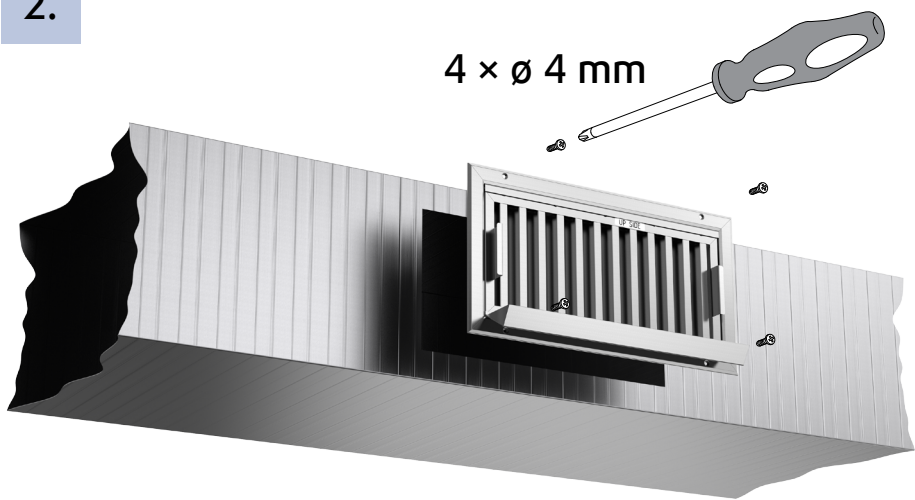

GT-...-V

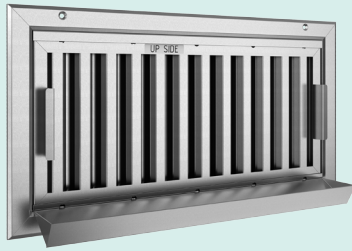


GT-...-H

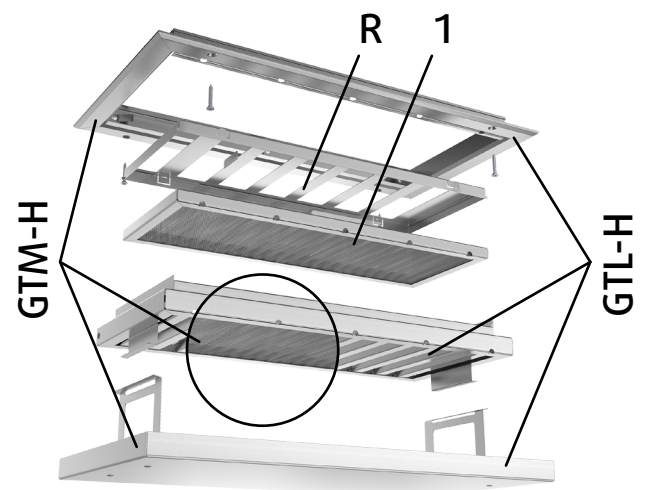
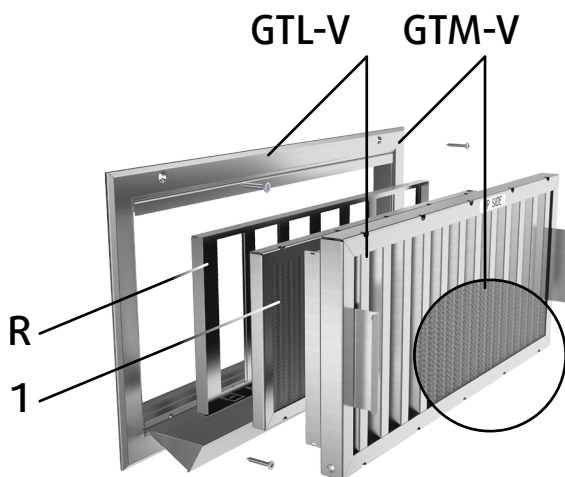


- GTM-V / GTL-V ✓
- GTM-V / GTL-V + 1 ✓
- GTM-V / GTL-V + 1 + R ✓
- GTM-V / GTL-V + R ✗



- GTM-H / GTL-H ✓
- GTM-H / GTL-H + 1 ✓
- GTM-H / GTL-H + 1 + R ✓
- GTM-H / GTL-H + R ✗

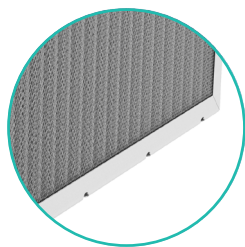

**GTM-V
&
GTM-H**

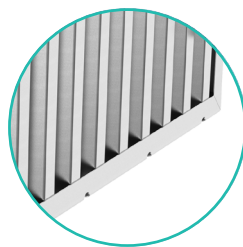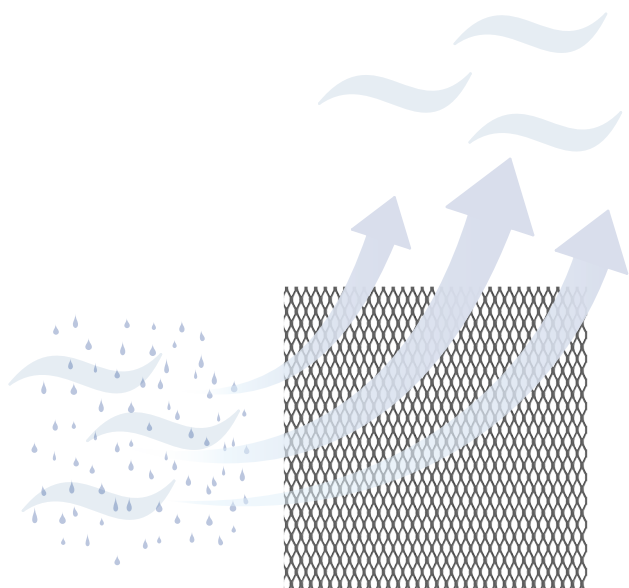

**GTL-V
&
GTL-H**

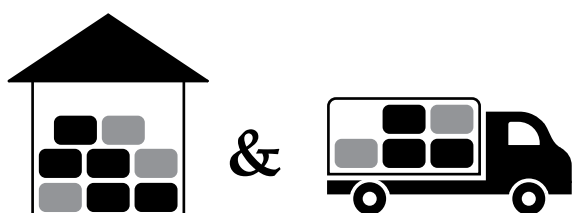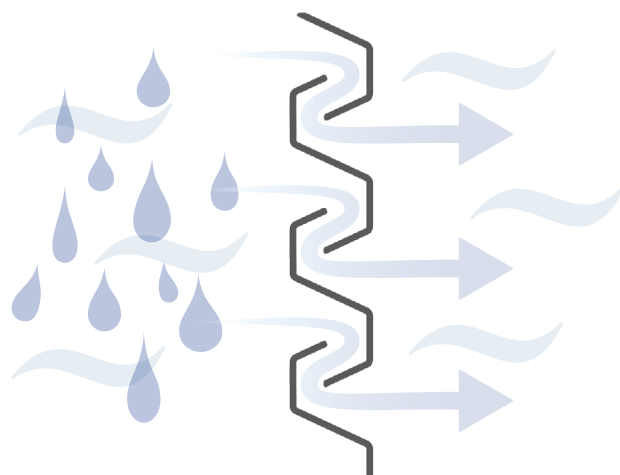


°C -20°C ... +50°C

% ≤ 95 %



°C -20°C ... +100°C


% ≤ 100 %

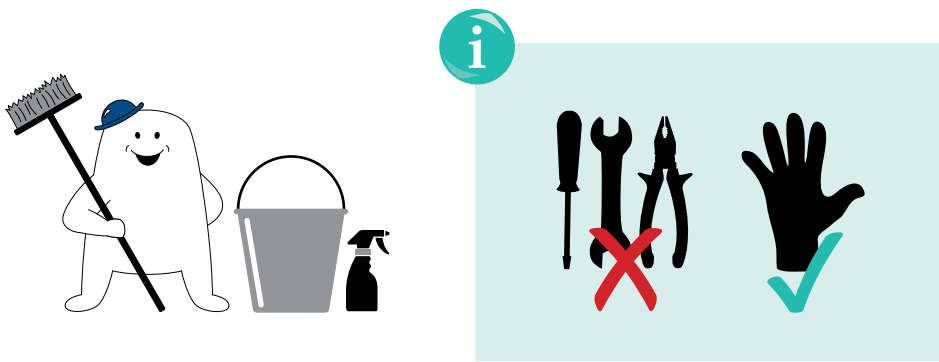


1.




2.

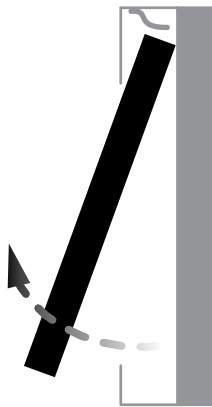

3.

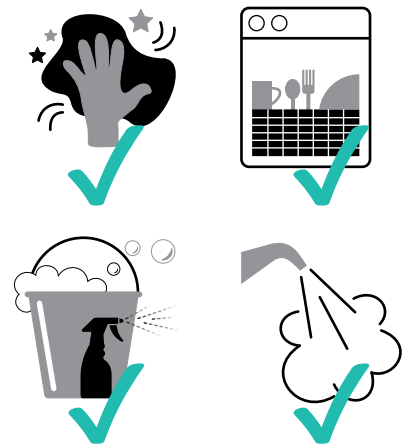

4.

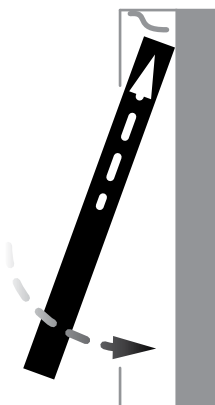

5.

