



# KSV



Installation, maintenance and operation instructions

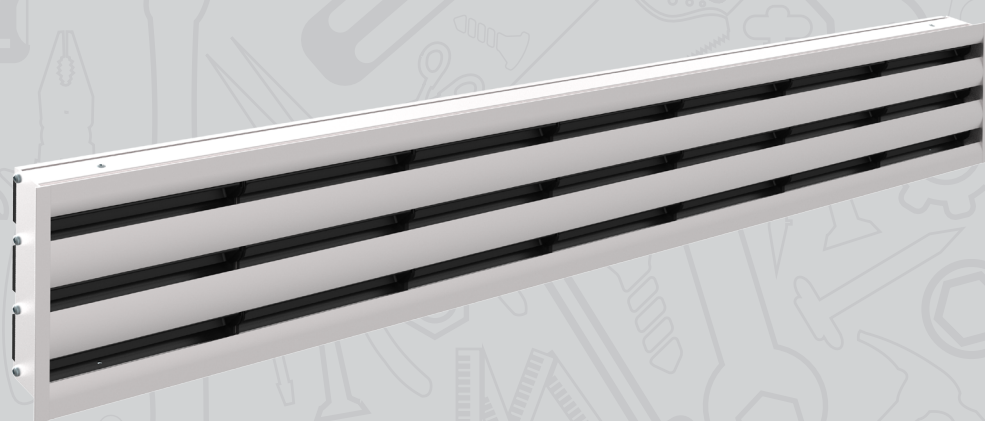

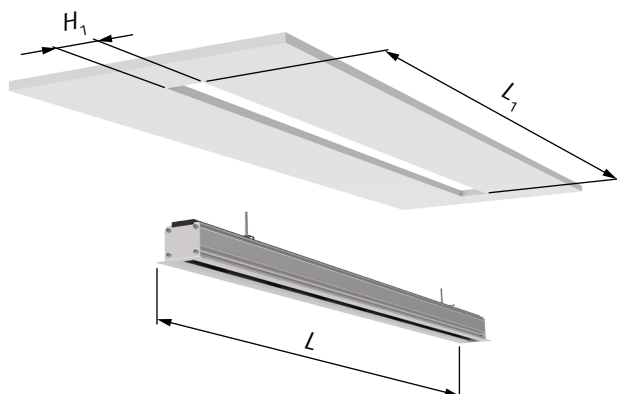


| $L$<br>(mm) | $L_1 \times H_1$ (mm) |           |            |            |
|-------------|-----------------------|-----------|------------|------------|
|             | KSV1                  | KSV2      | KSV3       | KSV4       |
| 600         | 602 × 56              | 602 × 86  | 602 × 137  | 602 × 208  |
| 750         | 752 × 56              | 752 × 86  | 752 × 137  | 752 × 208  |
| 900         | 902 × 56              | 902 × 86  | 902 × 137  | 902 × 208  |
| 1050        | 1052 × 56             | 1052 × 86 | 1052 × 137 | 1052 × 208 |
| 1200        | 1202 × 56             | 1202 × 86 | 1202 × 137 | 1202 × 208 |
| 1350        | 1352 × 56             | 1352 × 86 | 1352 × 137 | 1352 × 208 |
| 1500        | 1502 × 56             | 1502 × 86 | 1502 × 137 | 1502 × 208 |
| 1650        | 1652 × 56             | 1652 × 86 | 1652 × 137 | 1652 × 208 |
| 1800        | 1802 × 56             | 1802 × 86 | 1802 × 137 | 1802 × 208 |
| 1950        | 1952 × 56             | 1952 × 86 | 1952 × 137 | 1952 × 208 |


## KSV + KSV-MB

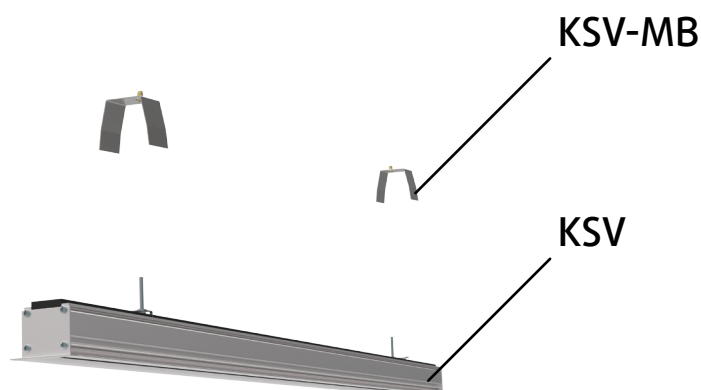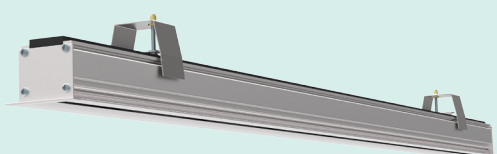


1.

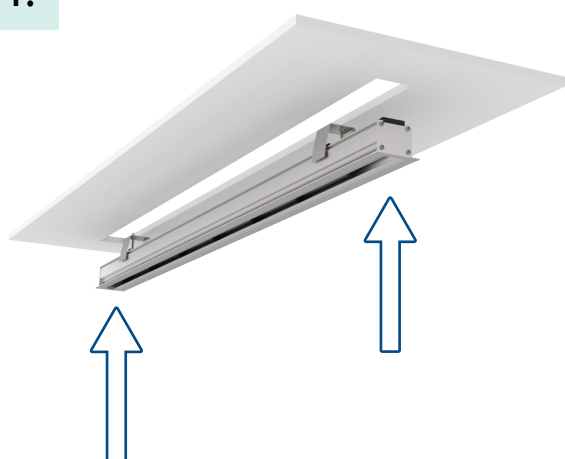


2.

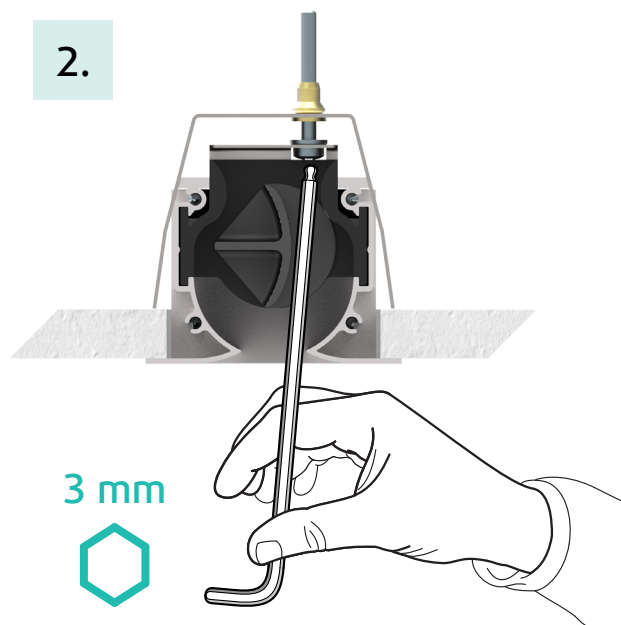


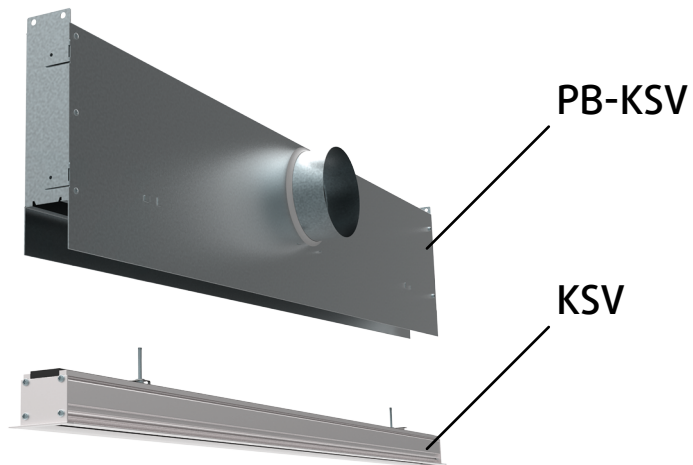


KSV + PB-KSV

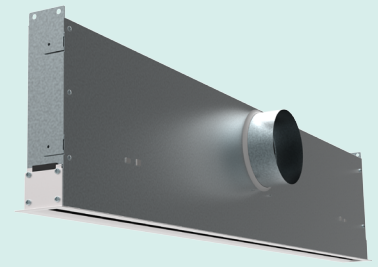

1.

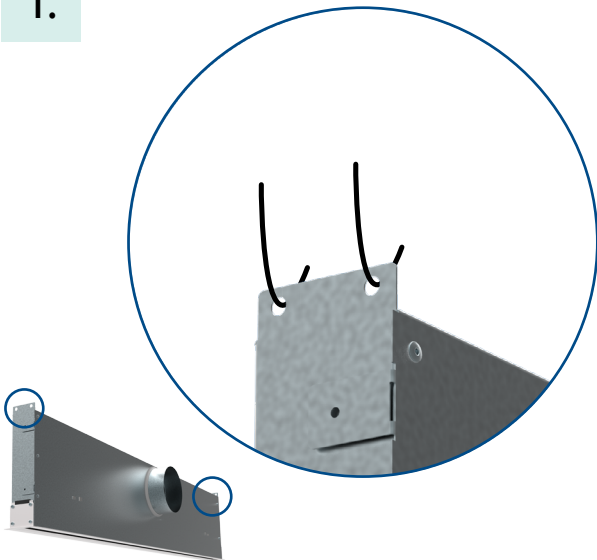

3.

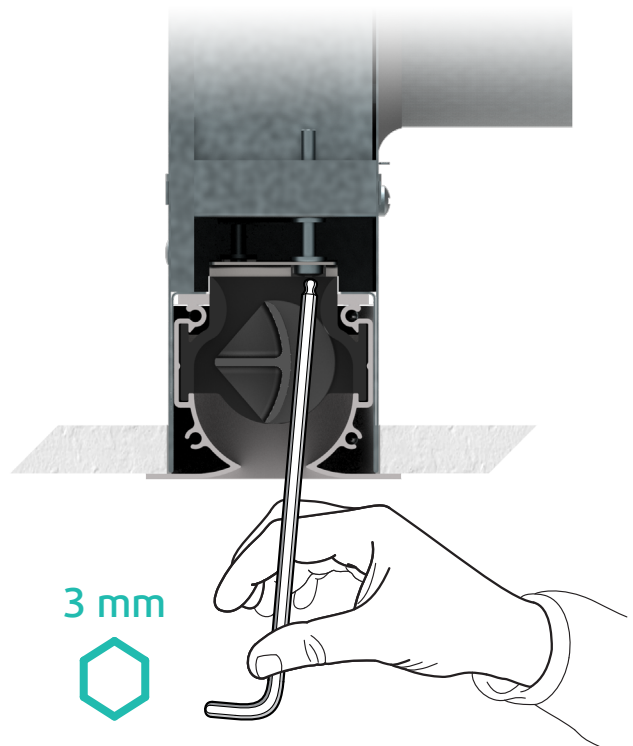

2.

