





Original instructions

# Outlet/inlet extension

**AR35XTT / AR42XTT / AGR55XTT**


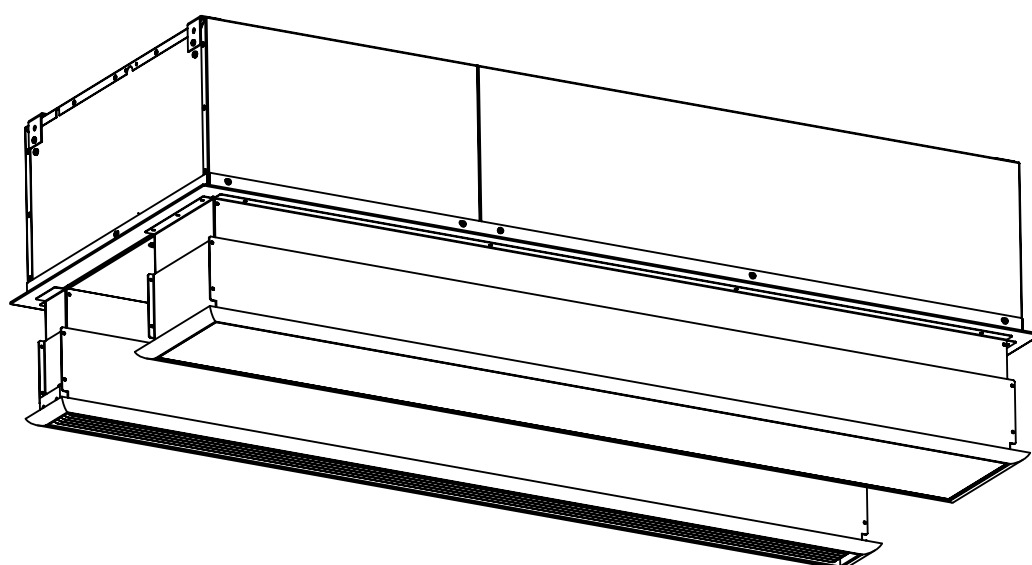


AR35XTT/AR42XTT/AGR55XTT

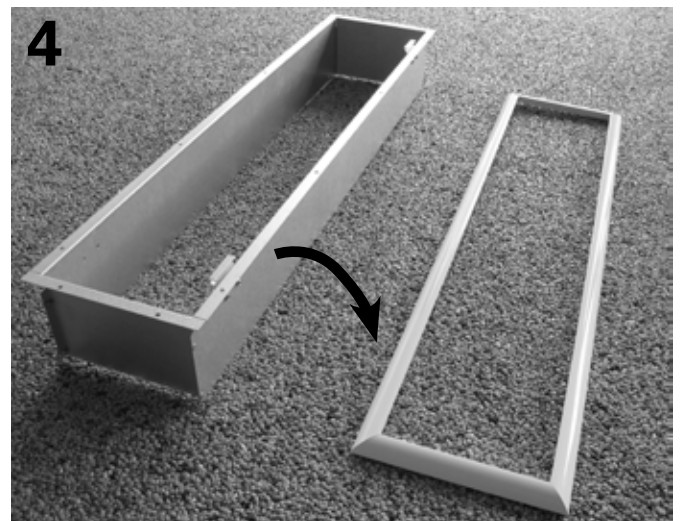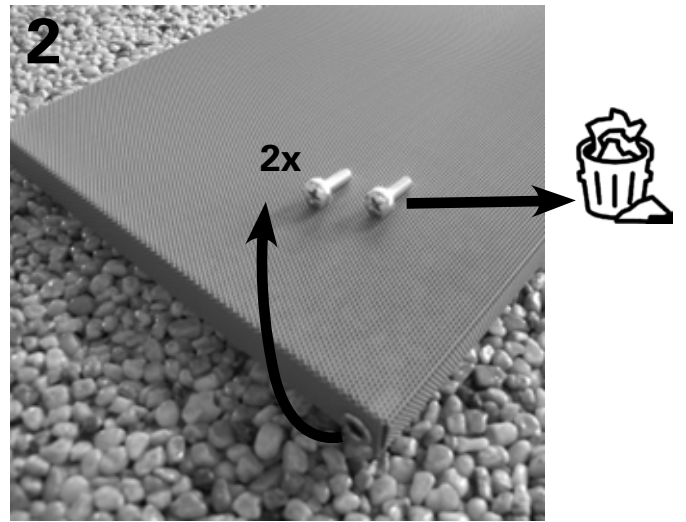
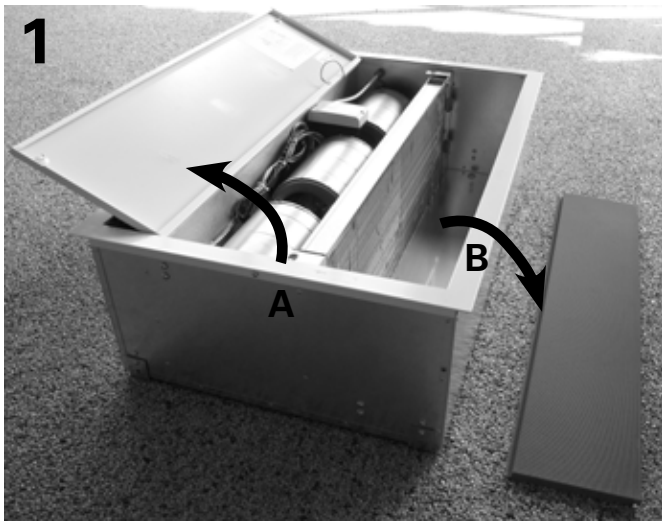







AR35XTT / AR42XTT / AGR55XTT -  
Inlet part 1



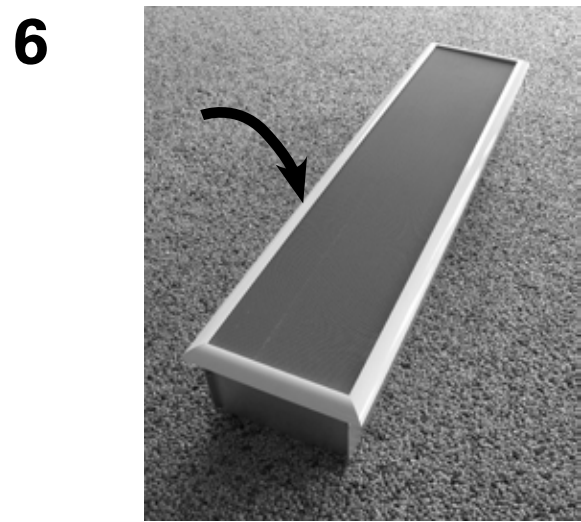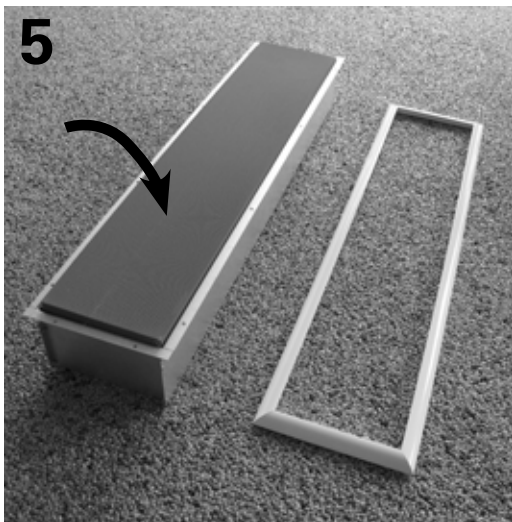


AR35XTT / AR42XTT / AGR55XTT -  
Inlet part 2

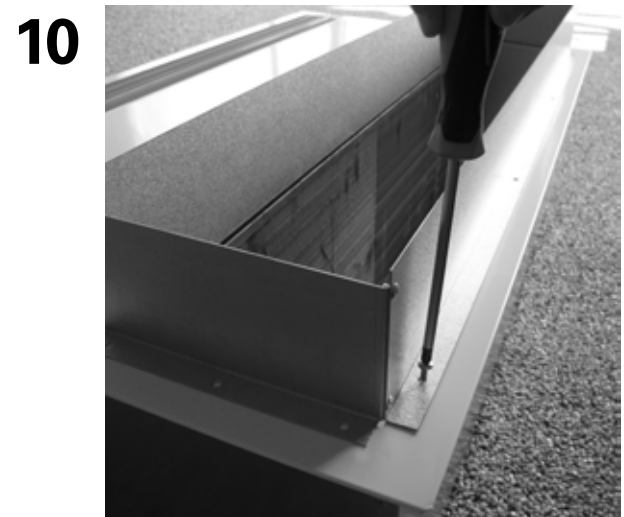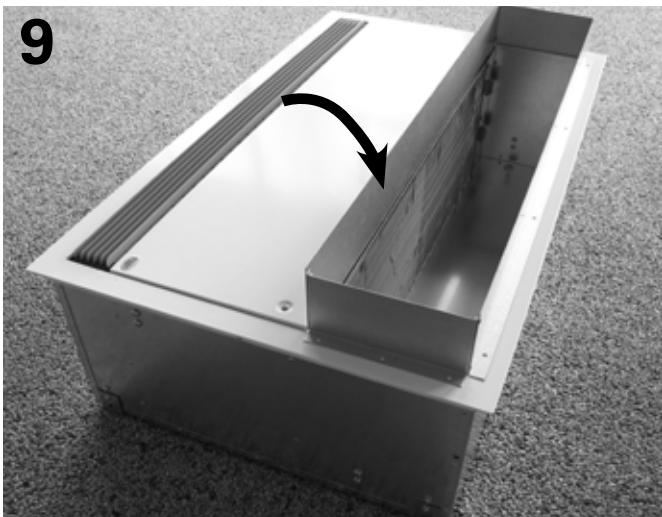

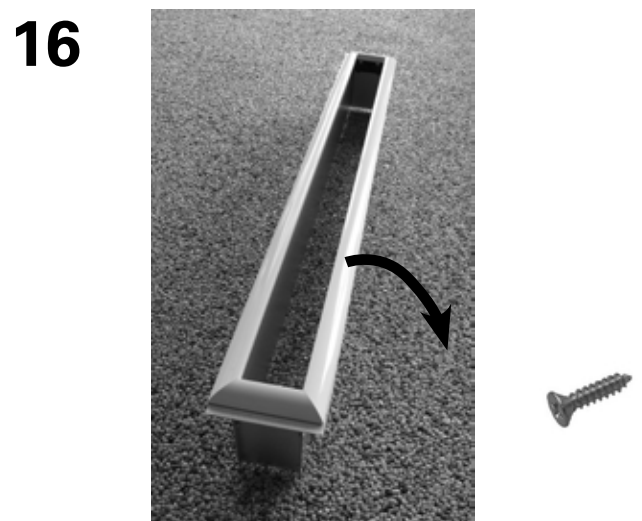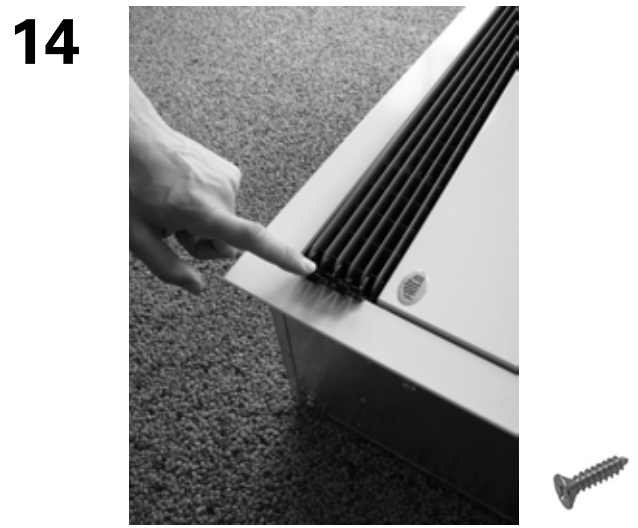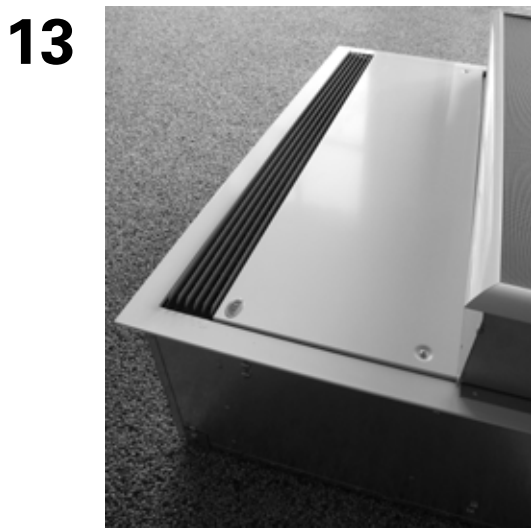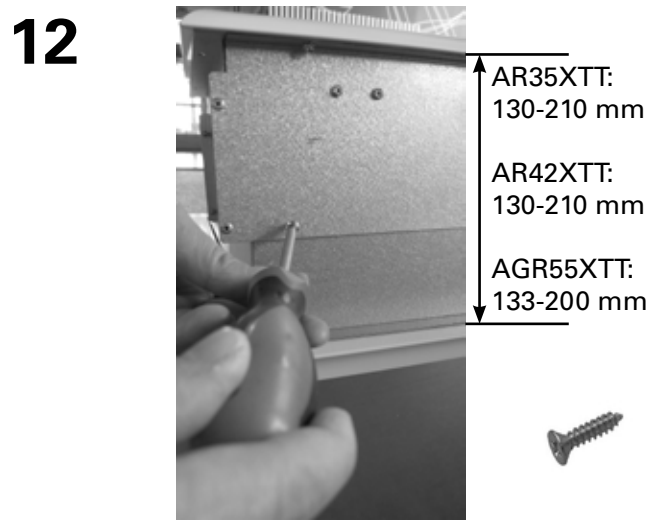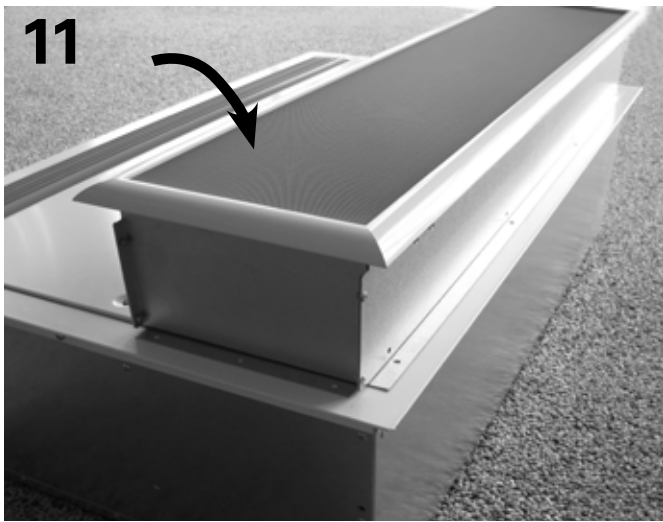

AR35XTT / AT42XTT / AGR55XTT -  
Outlet part 1

17

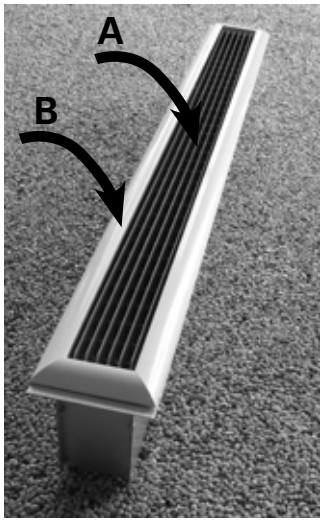


18



AR35XTT / AT42XTT / AGR55XTT -  
Outlet part 2

19


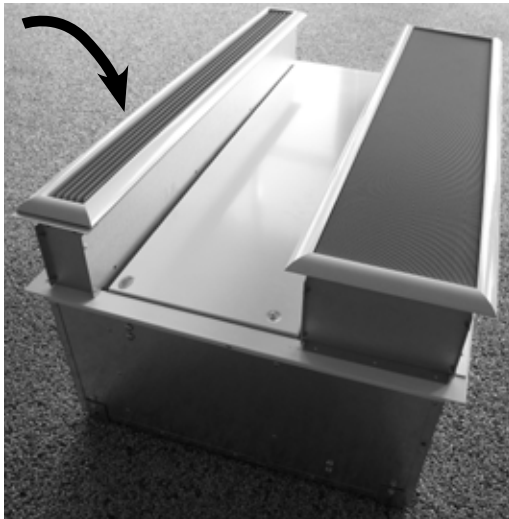


20



AR35XTT:  
130-210 mm  
AR42XTT:  
130-210 mm  
AGR55XTT:  
133-200 mm

AR35XTT/AR42XTT/AGR55XTT

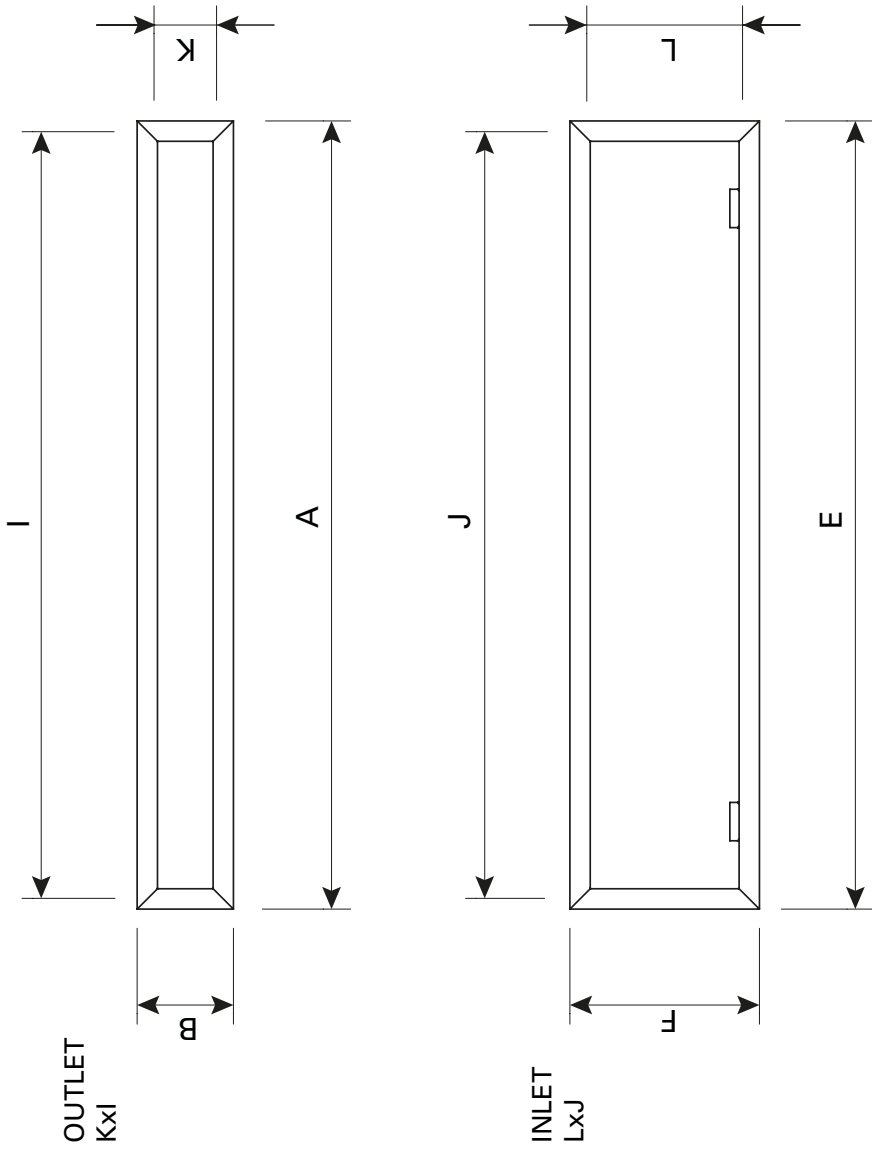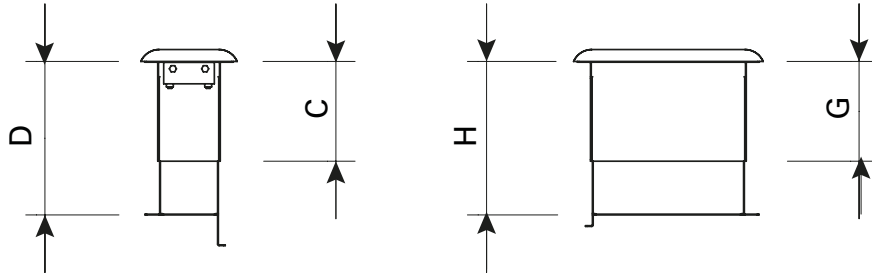

	AR35XTT10	AR42XTT10	AR35XTT15	AR42XTT15	AGR55XTT15	AR35XTT20	AR42XTT20	AGR55XTT20	AR42XTT25	AGR55XTT25	AGR55XTT30
A	1027	1027	1537	1537	1534	2042	2027	2024	2537	2534	3044
B	119	125,5	119	125,5	159	119	125,5	159	125,5	159	159
C	130	130	130	130	133	130	130	133	130	133	133
D	210	210	210	210	200	210	210	200	210	200	200
E	1027	1027	1537	1537	1534	2042	2027	2024	2537	2534	3044
F	247	247	247	247	450	247	247	450	247	450	450
G	130	130	130	130	133	130	130	133	130	133	133
H	210	210	210	210	200	210	210	200	210	200	200
I	999	999	1509	1509	1504	2014	1999	1994	2509	2504	3014
J	999	999	1509	1509	1504	2014	1999	1994	2509	2504	3014
K	75	81,5	75	81,5	117	75	81,5	117	81,5	117	117
L	203	203	203	203	405	203	203	405	203	405	405



**Main office**

Frico AB  
Box 102  
SE-433 22 Partille  
Sweden

Tel: +46 31 336 86 00

mailbox@frico.se  
www.frico.se

**For latest updated information and information  
about your local contact: [www.frico.se](http://www.frico.se)**