



## Use case

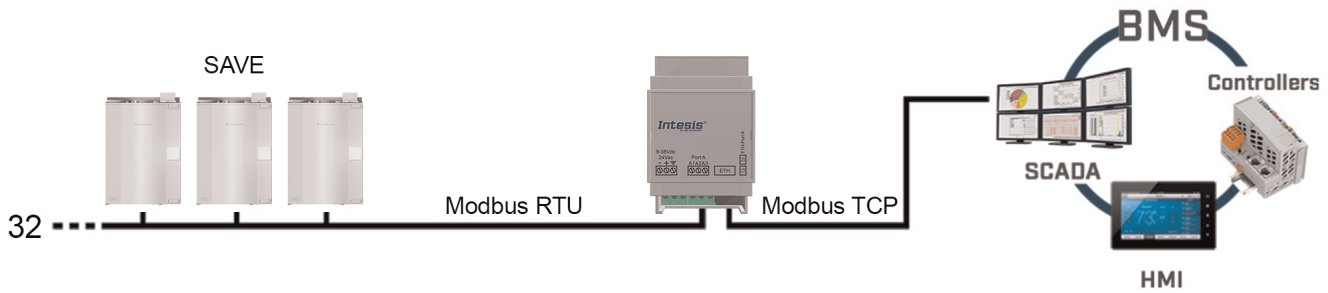

## To connect

Connect the EIA485 bus to connectors A1 (GND), A2 (B-) and A3 (A+) of Intesis gateway's Port. Respect the polarity.

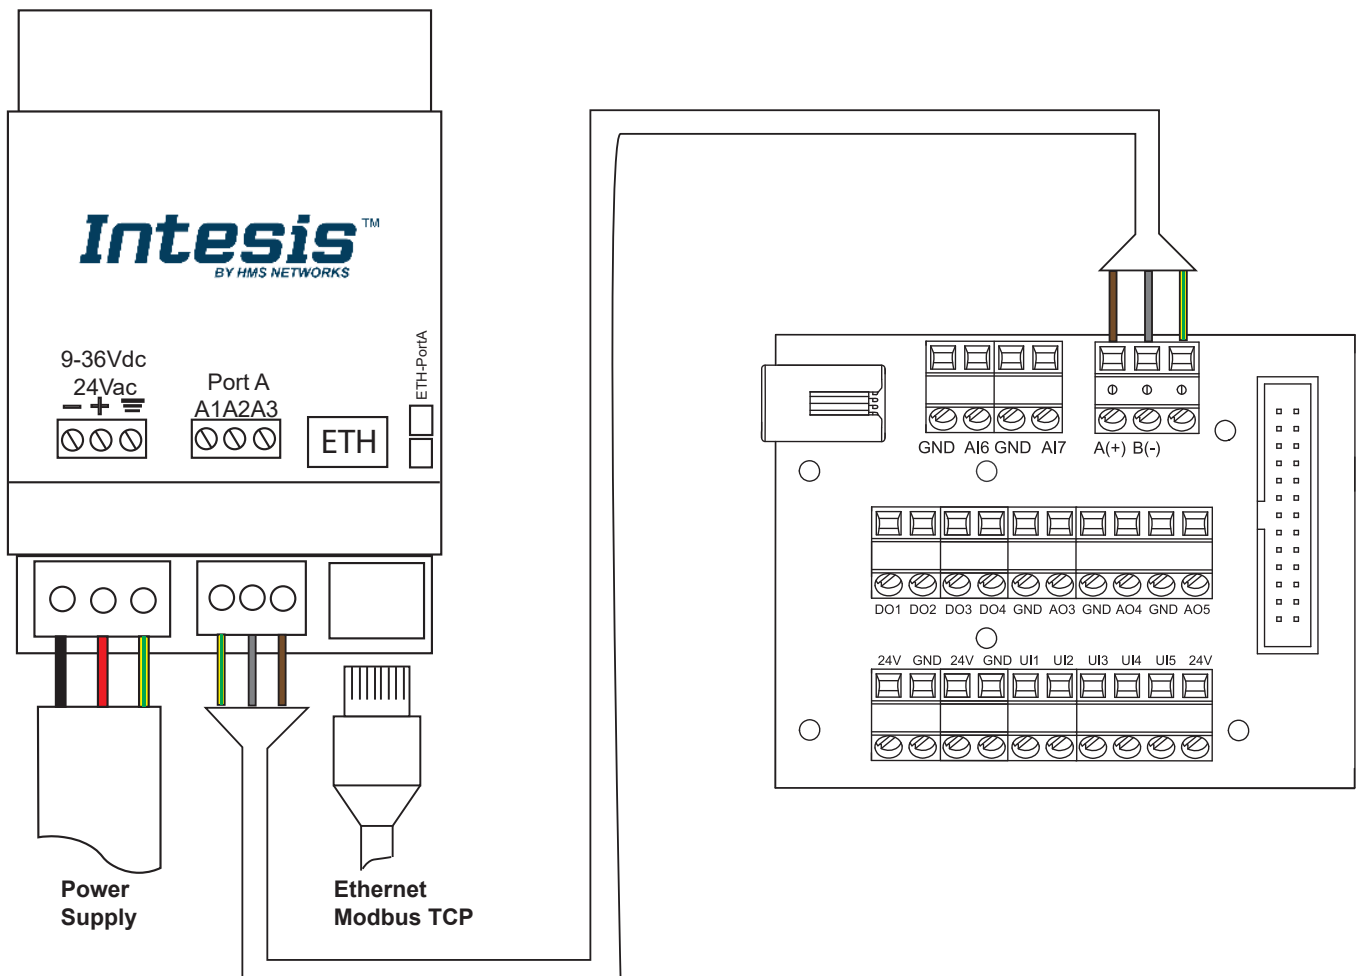

## Download links and software

INTESIS MAPS configuration tool: <https://www.intesis.com/products/intesis-maps#download>

Intesis MAPS training course: <https://elearning.hms-networks.com/course/intesis-maps>

SAVE Modbus variable list:

[https://shop.systemair.com/upload/assets/SAVE\\_MODBUS\\_VARIABLE\\_LIST\\_20210301\\_REV36.PDF](https://shop.systemair.com/upload/assets/SAVE_MODBUS_VARIABLE_LIST_20210301_REV36.PDF)

## Default SAVE Modbus settings

### If SAVE unit was produced before 2022-08-17:

- Slave address = 0
- Baudrate = 1200
- Parity = None
- Stop bits = 1

### If SAVE unit was produced after 2022-08-17 or SAVE unit type label has „Ver A“:

- Slave address = 1
- Baudrate = 1200
- Parity = None
- Stop bits = 1