
VTR 200 Ceiling mounting kit

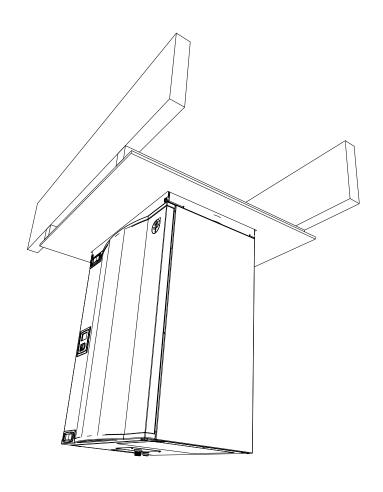

Installation instructions





Contents

1 Warnings	1
2 Included items	
3 Dimensions (mm)	1
4 Installation options	2
4.1 Fitting with battens	2
4.2 Fitting to concrete with threaded rods (accessory, art. no. 134014)	3
4.3 Fitting with anti-vibration mount (accessory, art. no. 134009)	4
5 Mounting the unit	



1 Warnings



Warning

Consider the unit weight when mounting!



/ Important

- Beware of sharp edges during mounting and maintenance. Use protective gloves.
- This product must only be operated by a person which has suitable knowledge or education within this field or carried out with the supervision of a suitably qualified person.

2 Included items



2x M4



В

2x M4 washer



8x Hexagon С x 38)






8x M6 washer





8x M5 E washer



3 Dimensions (mm)






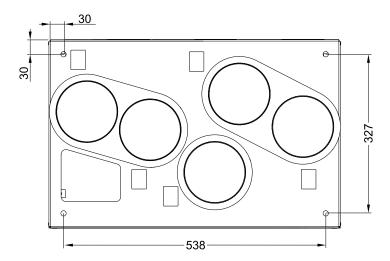





4 Installation options


4.1 Fitting with battens

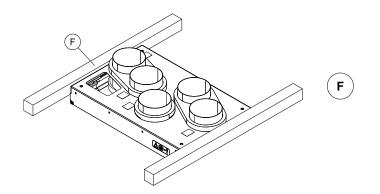

2x Batten (minimum 45 x 45 mm)



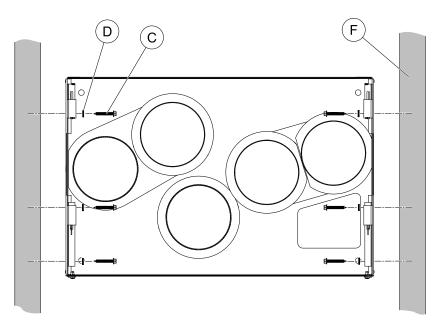

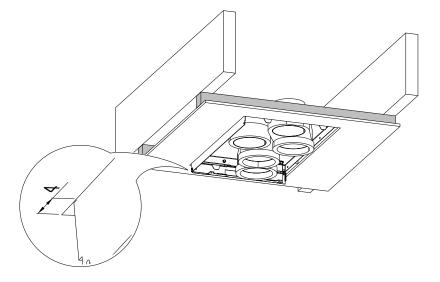


Screw battens with a ceiling mounting kit to the main ceiling. These screws are not included. Choose them based on your ceiling structure.


Leave at least a 4 mm gap between ceiling mounting kit and false ceiling to prevent vibration noises.




4.2 Fitting to concrete with threaded rods (accessory, art. no. 134014)



- (1) 4x Drop-in anchor M10 (12 mm x 32 mm)
- 2 4x Threaded rod M10 (1 m)
- (3) 8x Hex flange nut M10

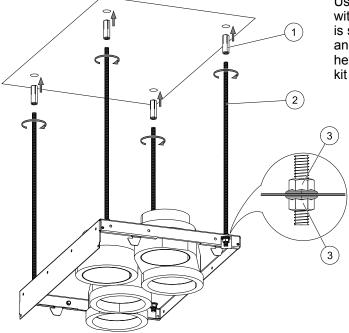

Use a 12 mm drill to make 4 holes in the ceiling with a depth of 40 mm. Distance between holes is shown in dimensions drawing. Install drop-in anchors (1) and attach threaded rods (2). Use hex flange nuts (3) to mount ceiling mounting kit on threaded rods.

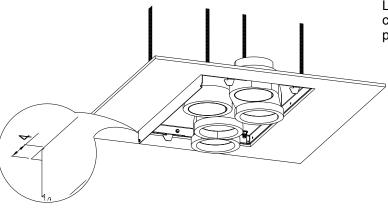


Leave at least a 4 mm gap between ceiling mounting kit and false ceiling to prevent vibration noises.


210647



4.3 Fitting with anti-vibration mount (accessory, art. no. 134009)

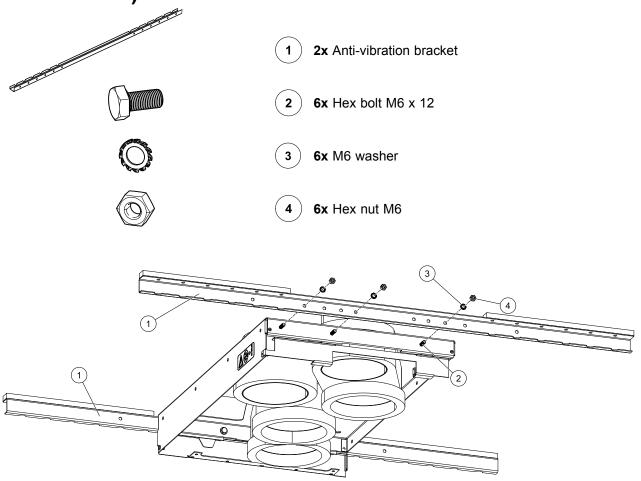

Anti-vibration brackets (1) should be screwed to the ceiling mounting kit from both sides with added hex bolts (2) and tightened with washers (3) and hex nuts (4).

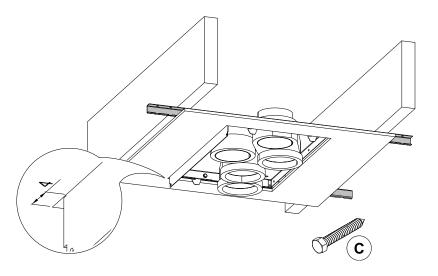


Screw anti-vibration brackets with a ceiling mounting kit to the main ceiling. Use included screws (C).

Leave at least a 4 mm gap between ceiling mounting kit and false ceiling to prevent vibration noises.




5 Mounting the unit

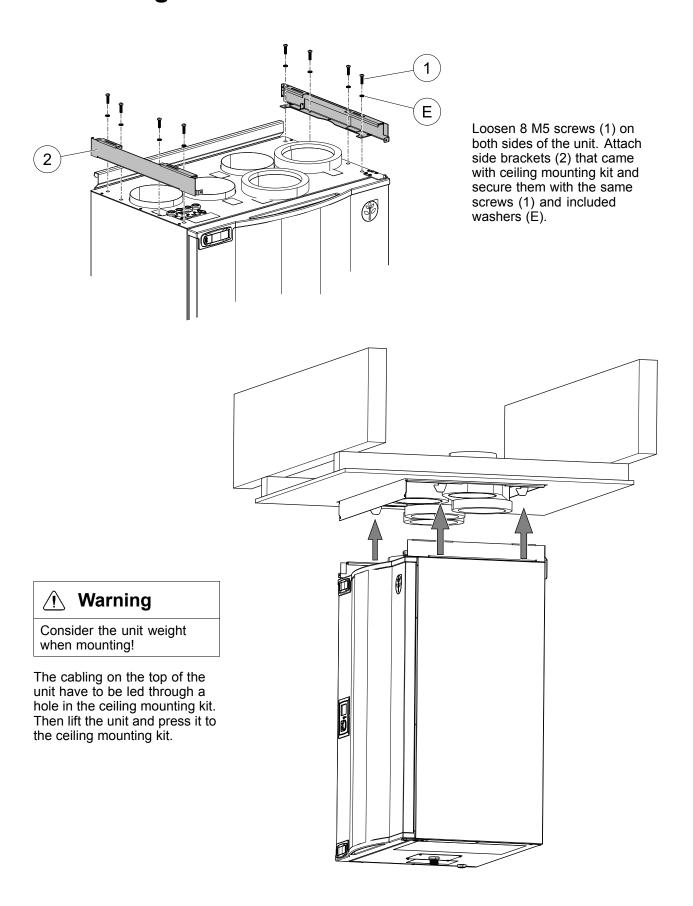


5 210647



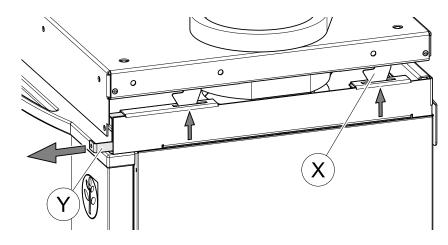

Lock hooks (X) should go through brackets. Pull out the lock mechanism (Y) if needed.

Screw the locking mechanism on both sides using the screws (A) and washers (B).

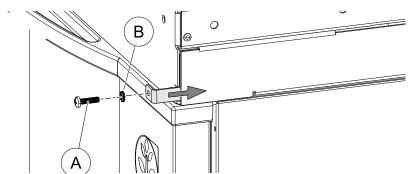

6

Systemair Sverige AB reserves the right to make changes and improvements to the contents of this manual without prior notice.



Systemair UAB
Linų st. 101
LT-20174 Ukmergė, LITHUANIA
Phone +370 340 60165
Fax +370 340 60166
www.systemair.com