
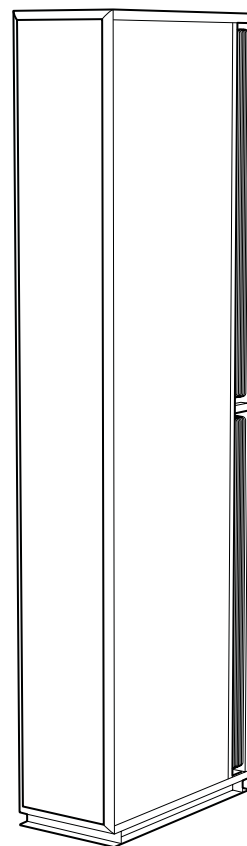


Original instructions

## Cordilla

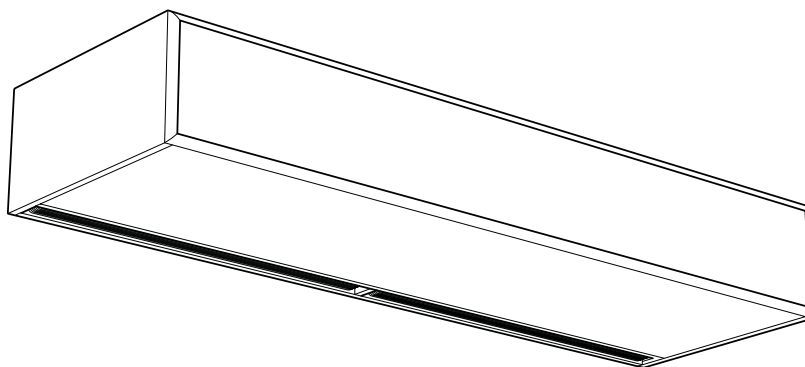

EN ... 19

FR ... 23

DE ... 29

SE ... 35

NO ... 40

DK ... 45

FI ... 51

ES ... 56

NL ... 62

IT ... 68


PL ... 74

RU ... 80

- EN The introduction pages consist mainly of pictures. For translation of the English texts used, see the respective language pages.
- SE Introduktionssidorna består huvudsakligen av bilder. För översättning av de engelska texter som används, se respektive språksidor.
- NO Introduksjonssidene består hovedsakelig av bilder. For oversettelse av de engelske tekstene, se de respektive språksidene
- FR Les pages de présentation contiennent principalement des images. Consulter la page correspondant à la langue souhaitée.
- DE Die Einleitungsseiten bestehen hauptsächlich aus Bildern. Für die Übersetzung der verwendeten Texte in englischer Sprache, siehe die entsprechenden Sprachseiten.
- NL De inleidende pagina's bevatten hoofdzakelijk afbeeldingen. Voor een vertaling van de gebruikte Engelse teksten, zie de pagina's van de resp. taal.
- ES Las páginas introductorias contienen básicamente imágenes. Consulte la traducción de los textos en inglés que las acompañan en las páginas del idioma correspondiente.
- IT Le pagine introduttive contengono prevalentemente immagini. Per le traduzioni dei testi scritti in inglese, vedere le pagine nelle diverse lingue.
- PL Początkowe strony zawierają głównie rysunki. Tłumaczenie wykorzystanych tekstów angielskich znajduje się na odpowiednich stronach językowych.
- RU Страницы в начале Инструкции состоят в основном из рисунков, схем и таблиц. Перевод встречающегося там текста приведен в разделе RU.
- FI Esittelysivut koostuvat lähinnä kuvista. Suvuilla olevien enlanninkielisten sanojen käännökset löytyvät ko. kielisivuilta.
- DK Introduktionssiderne består hovedsageligt af billeder. For oversættelse af de engelske tekster, se siderne for de respektive sprog.


Cordilla

Horizontal mounting

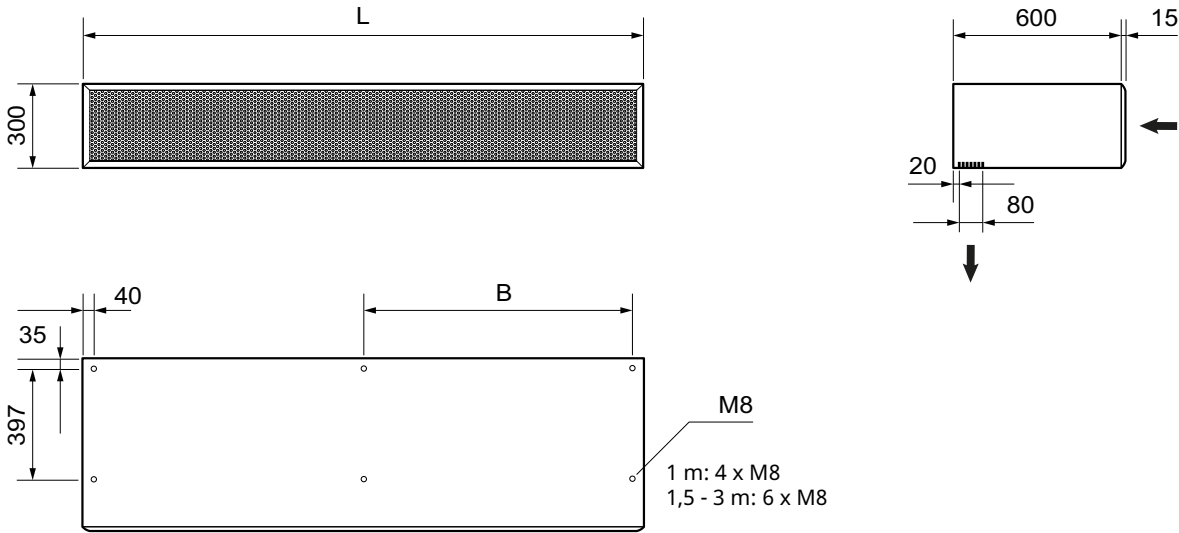

	L [mm]	B [mm]
<b>CDLx10</b>	1000	-
<b>CDLx15</b>	1500	710
<b>CDLx20</b>	2000	960
<b>CDLx25</b>	2500	1210
<b>CDLx30</b>	3000	1460

Vertical mounting

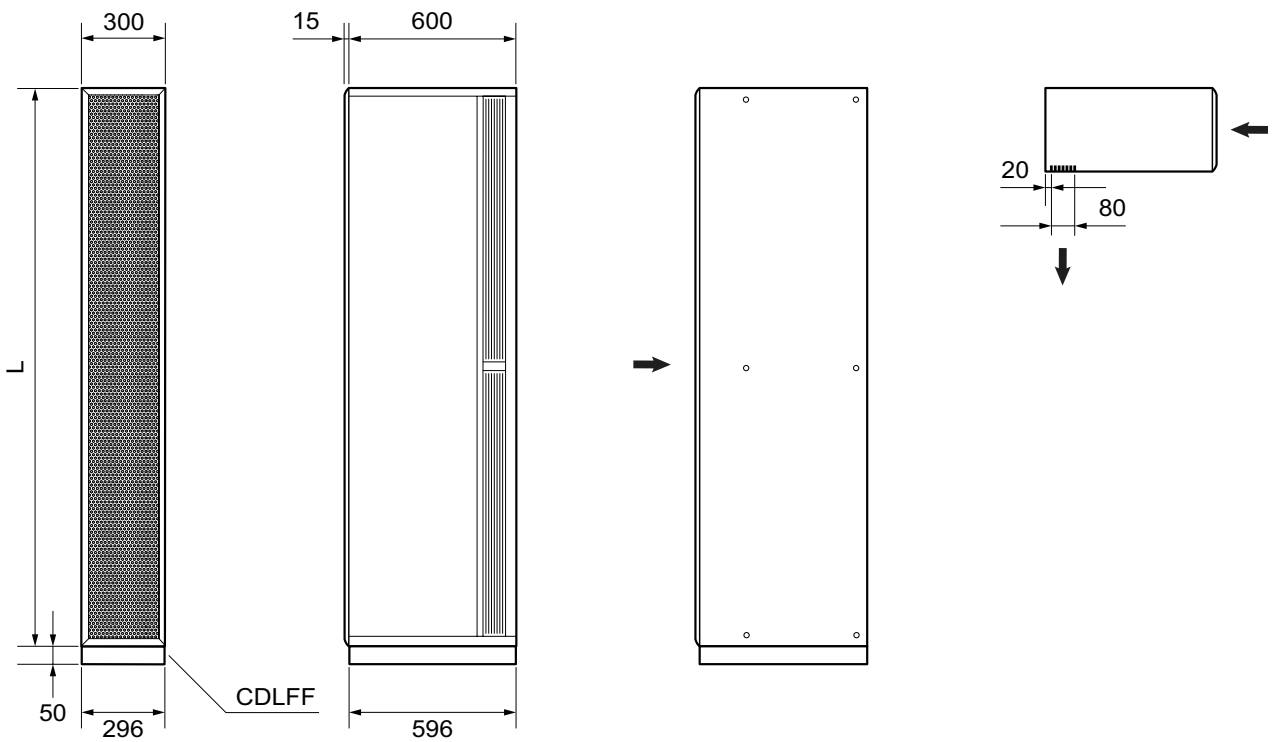

Product key

**Bold** = Standard, included in standard cost.

Type* <sup>1</sup>	Performance* <sup>1</sup>	Length* <sup>1</sup>	Heat* <sup>1</sup>	Mounting* <sup>2</sup>	Recessed* <sup>3</sup>	Water connection* <sup>3</sup>	Electrical connection* <sup>3</sup>	Colour
CDL	35	10	WL	<b>H</b>	<b>X</b> * <sup>4</sup>	<b>A</b>	A	<b>RAL Classic</b> * <sup>5</sup>
	45	15	WLL	VL	ZDS	B	<b>B</b>	
		20	E	VR	ZDA	C	C	
		25	A		ZDE	D	D	
		30				<b>X</b> * <sup>4</sup>		

\*<sup>1</sup>) See Technical specifications.

\*<sup>2</sup>) H = Horizontal, VL = Vertical left and VR = Vertical right, seen from inside.

\*<sup>3</sup>) See drawings.


\*<sup>4</sup>) State X for units with Electrical heating or Ambient (without heat)

\*<sup>5</sup>) Other colours available on request

Example: CDL4525WL - H - ZDS - B - A - RAL9010



Other adaptations may be possible upon request, please contact Frico.

Recessed mounting

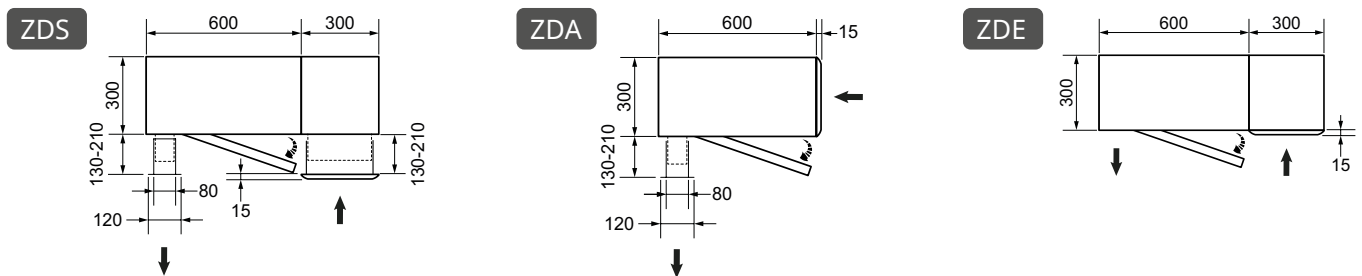





Horizontal mounting - Water connections

Horizontal mounting - Electrical connections

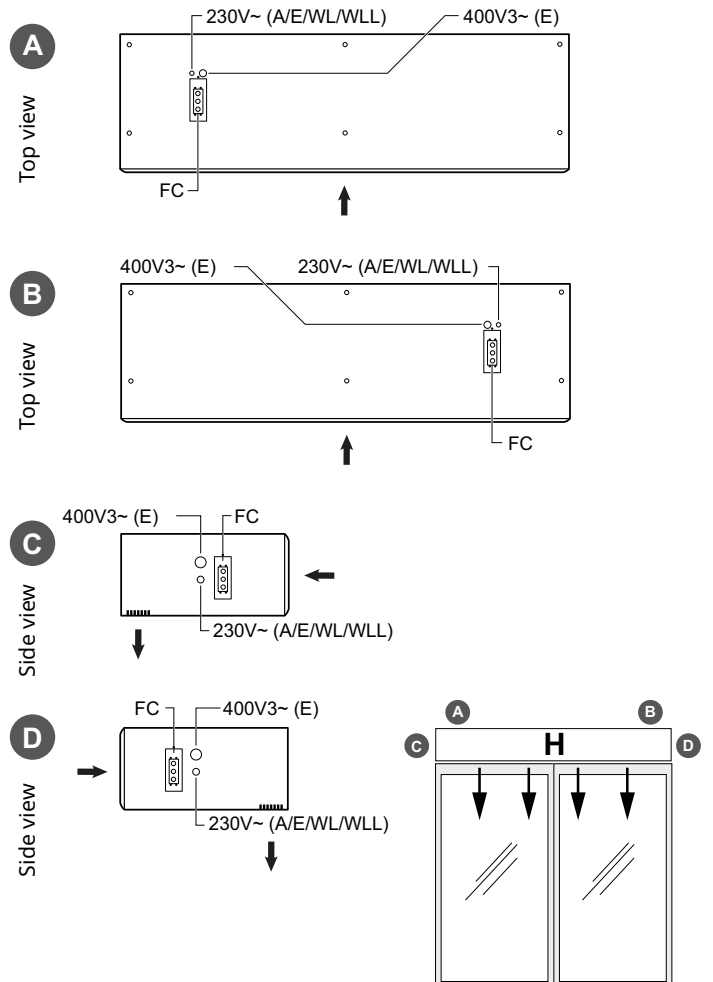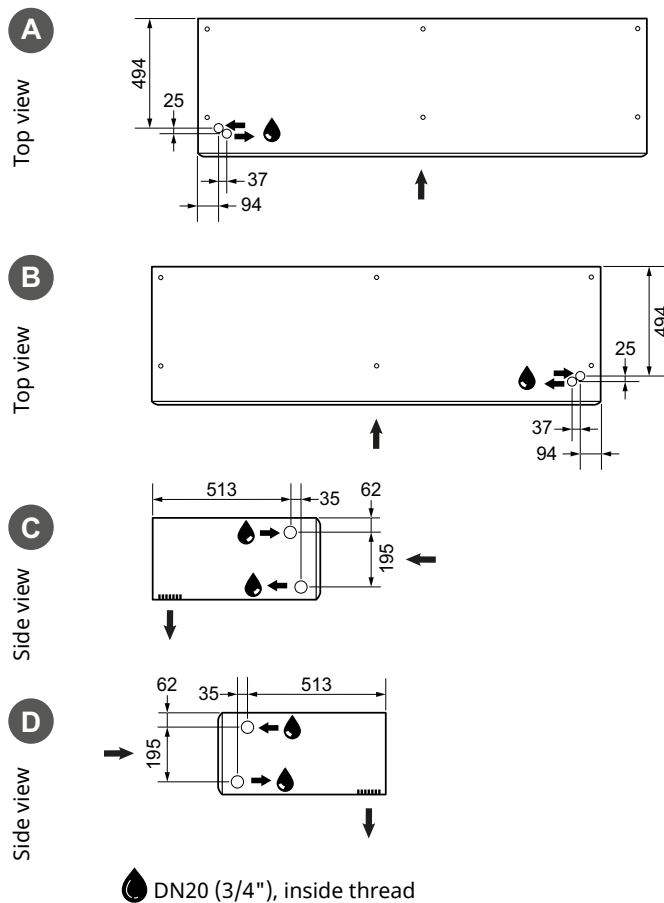






Vertical mounting - Water connections

Vertical mounting - Electrical connections

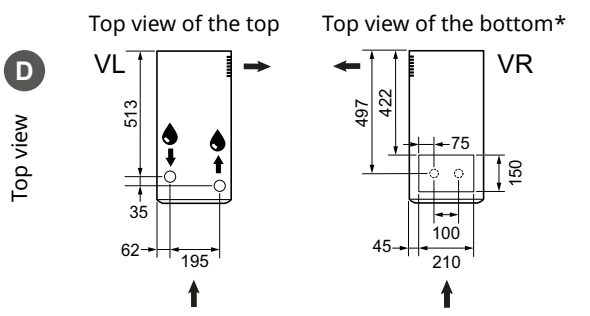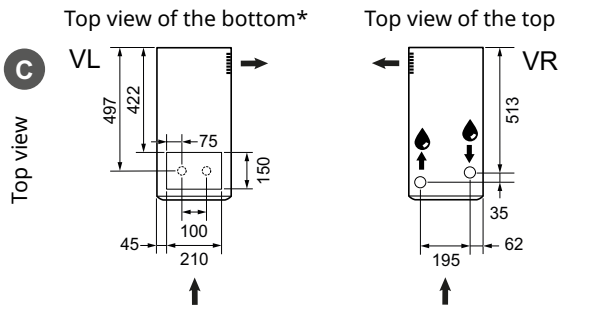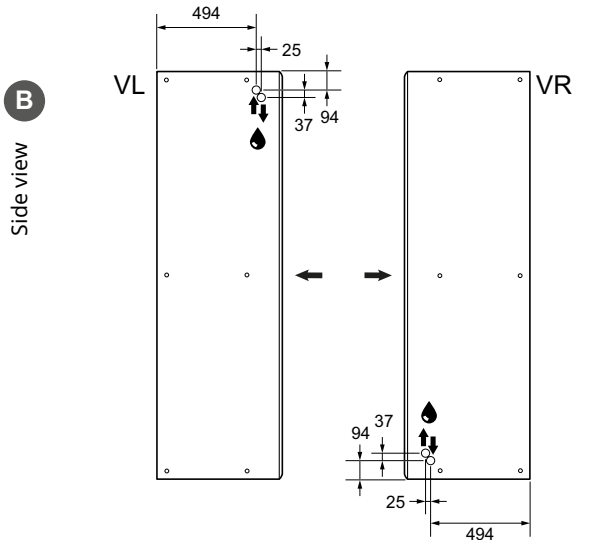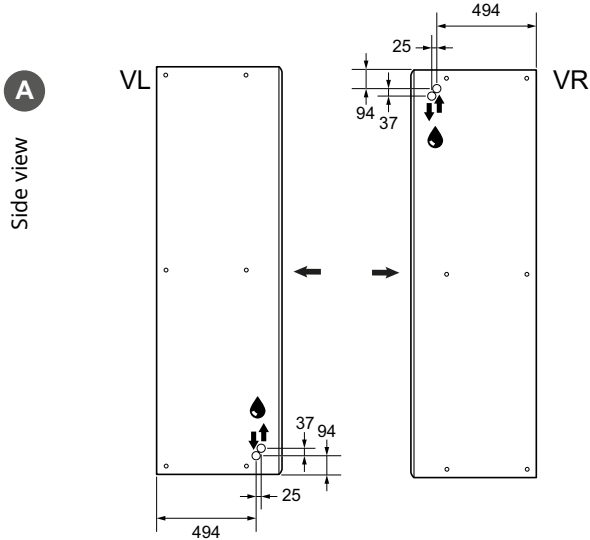

\*) See Distance water connections - end

🔹 DN20 (3/4"), inside thread

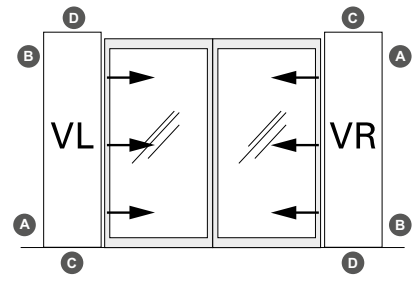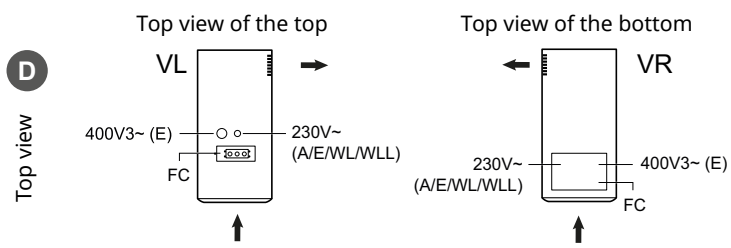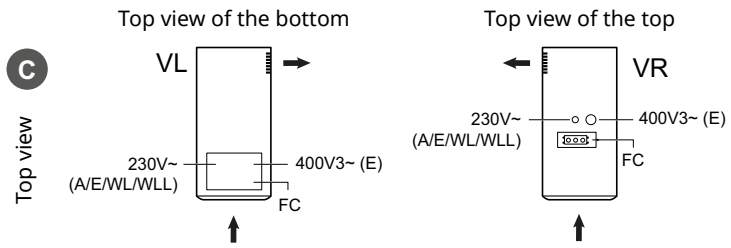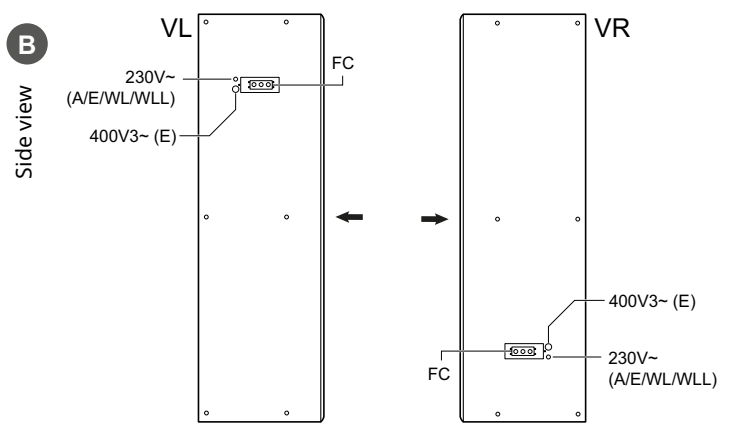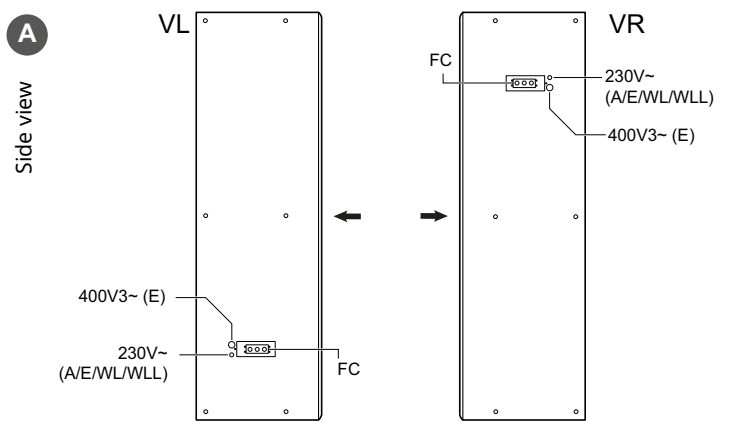

# Cordilla

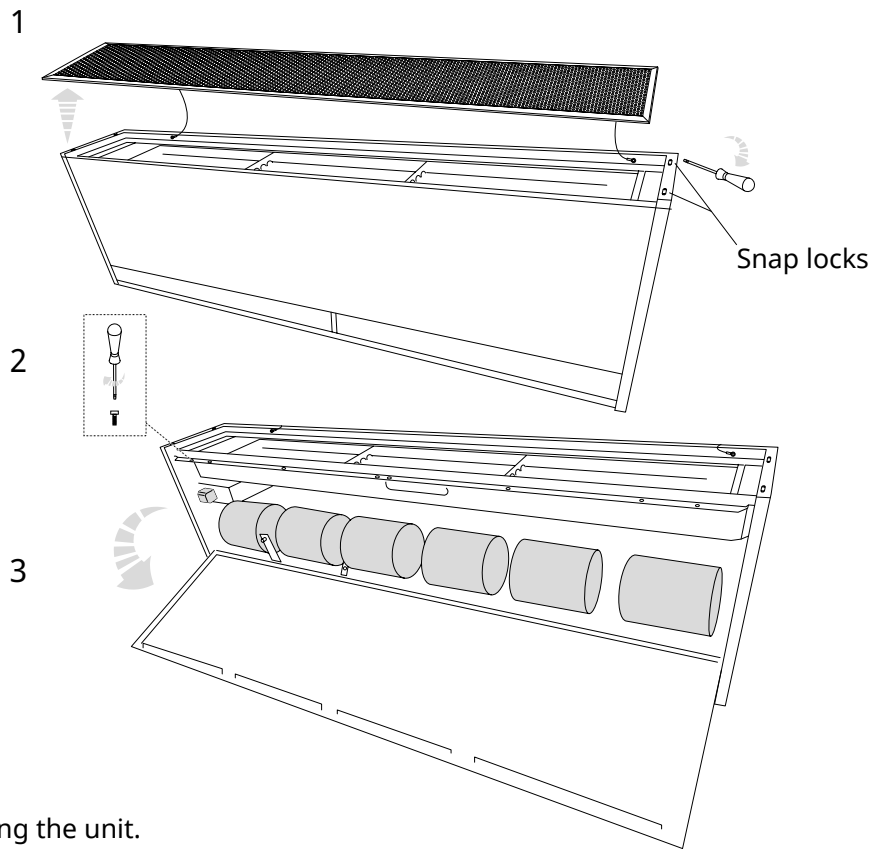


Fig. 1: Opening the unit.

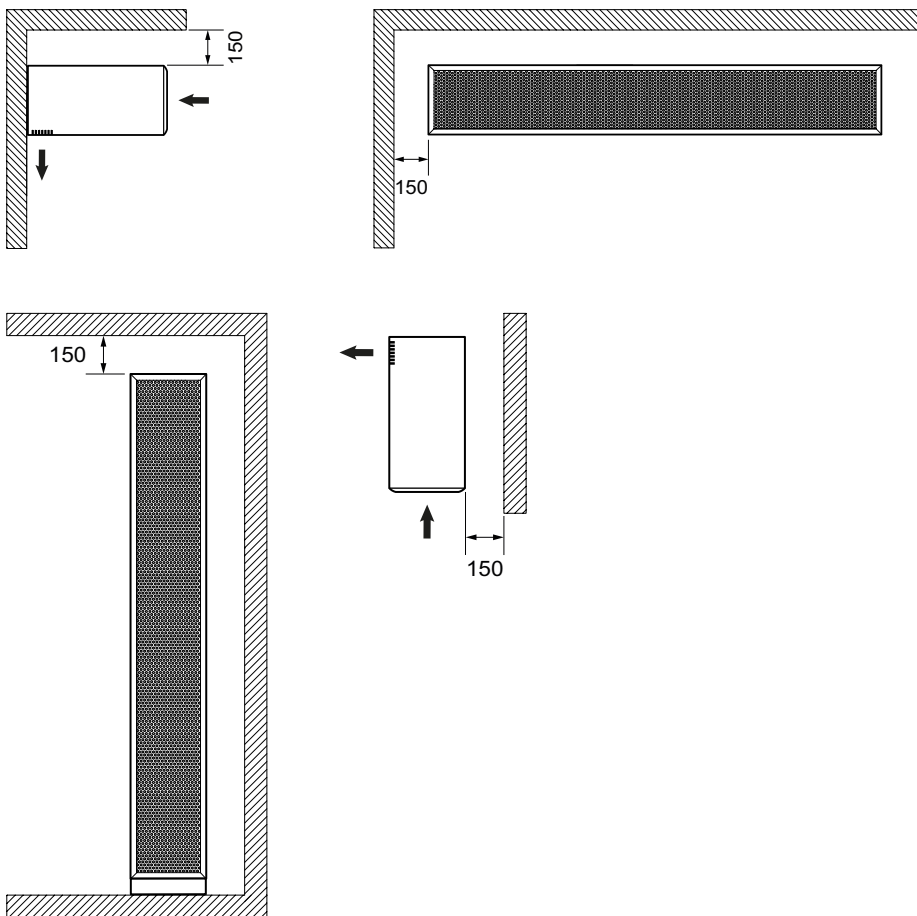


Fig.2: Minimum distance.

## Connections

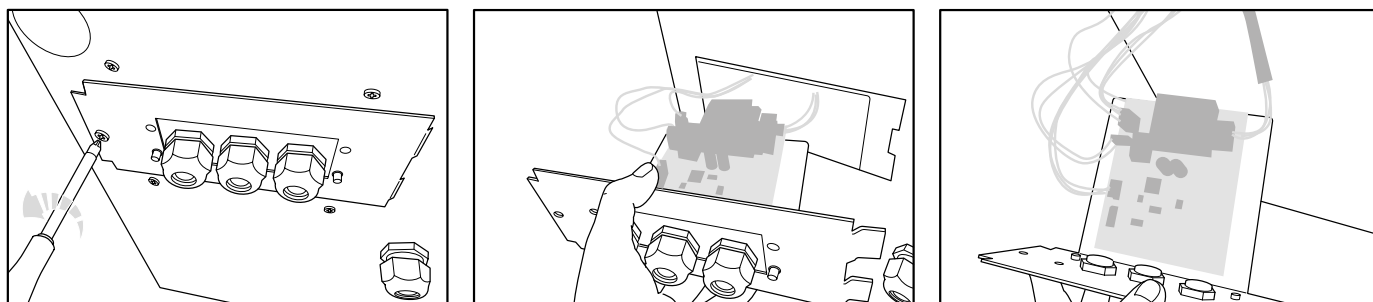


Fig. 3a: PC board FC is integrated within the air curtain at delivery.

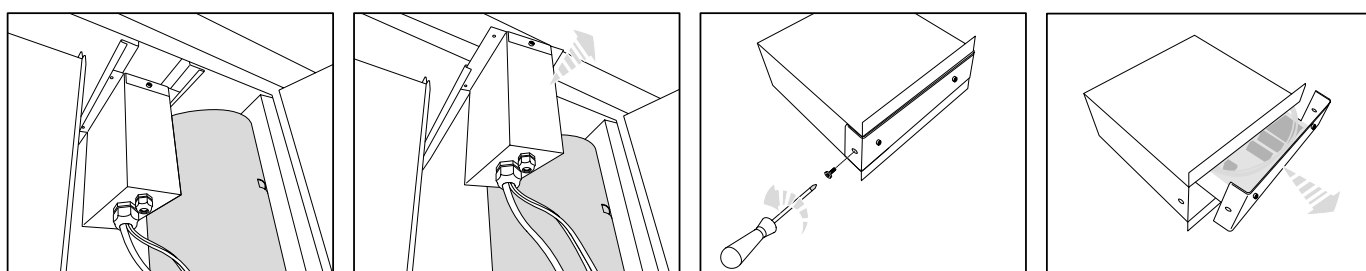


Fig. 3b: PC board FC is integrated within the air curtain at delivery. Vertical mounting, connections from below.

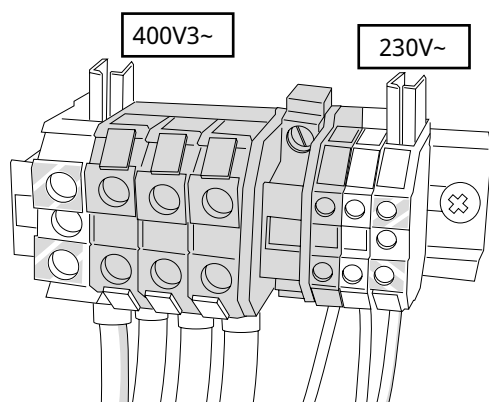


Fig. 4: Terminal blocks

Type	Voltage [V]	Max output [kW]	Minimal cross section Cable [mm <sup>2</sup> ]	Nominal cross section Terminal block [mm <sup>2</sup> ]
<b>Controls</b>	230V~	-	1,5	4
<b>CDL3510E09</b>	400V3~	9	2,5	16
<b>CDL3515E12</b>	400V3~	12	4	16
<b>CDL3520E18</b>	400V3~	18	10	16
<b>CDL3525E18</b>	400V3~	18	10	16
<b>CDL3530E30</b>	400V3~	30	16	16
<b>CDL4510E15</b>	400V3~	15	6	16
<b>CDL4515E23</b>	400V3~	23	10	16
<b>CDL4520E30</b>	400V3~	30	16	16
<b>CDL4525E32</b>	400V3~	32	16	16
<b>CDL4530E32</b>	400V3~	32	16	16

## Cordilla


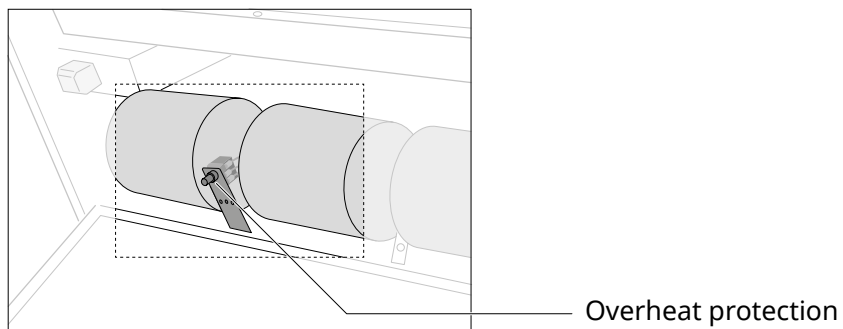


Fig. 5: Overheat protection

## Water connection

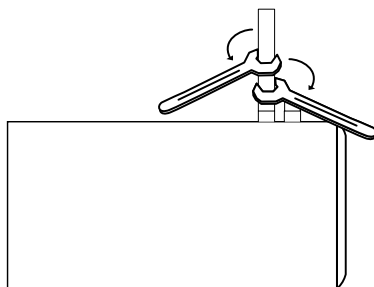

NOTE! Use a pipe wrench or a similar tool to grip the air curtain connections to prevent straining of the pipes.

## Distance water connections - end

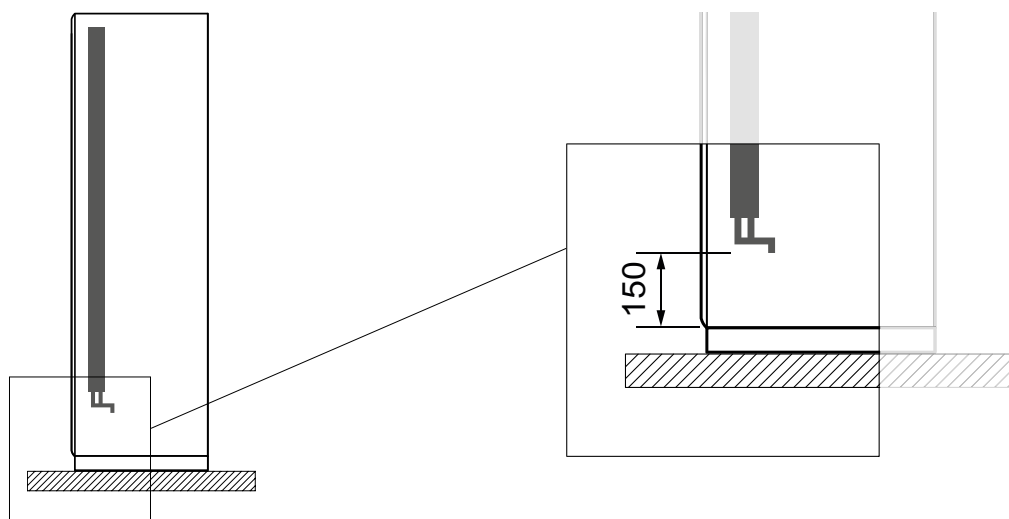


Fig. 6: Water connection



Accessories - horizontal mounting

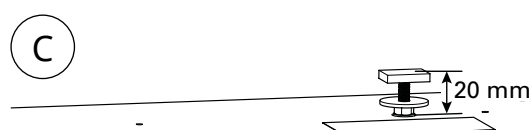
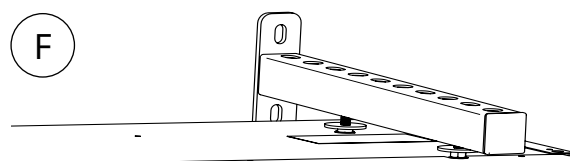
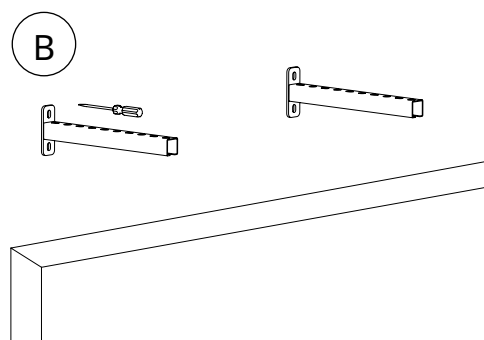
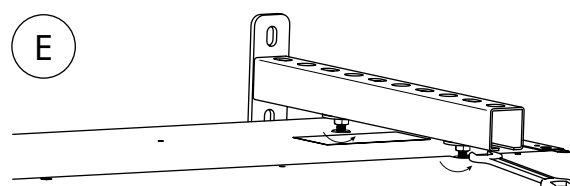
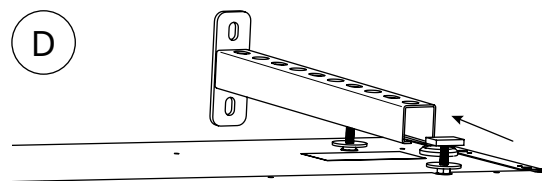
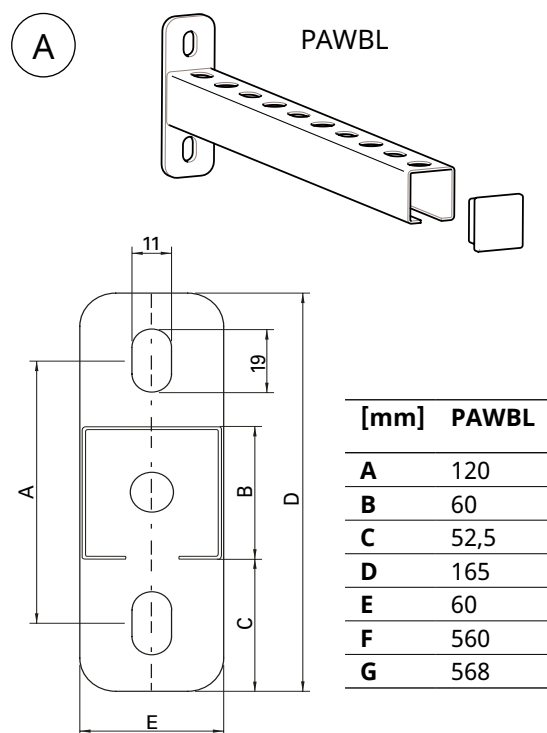


Fig. 7: See separate manual for PAWBL.

Item number	Type	Used for	Consists of	Length
214951	<b>PAWBL15</b>	CDLx10	2 pcs	560 mm
214952	<b>PAWBL20</b>	CDLx15 / CDLx20 / CDLx25 / CDLx30	3 pcs	560 mm

## Accessories - horizontal mounting

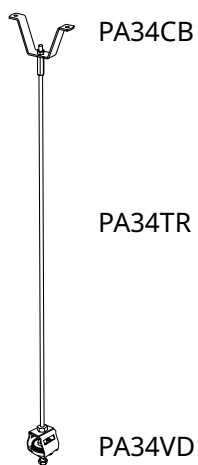


Fig. 8: PA34TR + PA34CB + PA34VD.  
See separate manual for PA34TR.

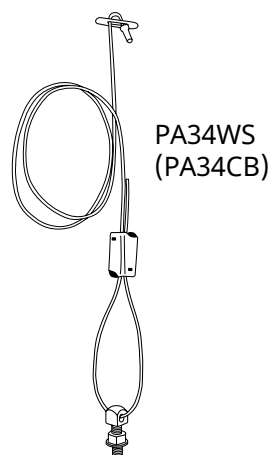





Fig.9: PA34WS + PA34CB  
See separate manual for PA34WS.

Item number	Type	Used for	Consists of	Length
18059	<b>PA34CB15</b>	CDLx10	4 pcs	
18060	<b>PA34CB20</b>	CDLx15 / CDLx20 / CDLx25 / CDLx30	6 pcs	
18062	<b>PA34WS15</b>	CDLx10	4 pcs	3 m
18063	<b>PA34WS20</b>	CDLx15 / CDLx20 / CDLx25 / CDLx30	6 pcs	3 m
18056	<b>PA34TR15</b>	CDLx10	4 pcs	1 m
18057	<b>PA34TR20</b>	CDLx15 / CDLx20 / CDLx25 / CDLx30	6 pcs	1 m
18065	<b>PA34VD15</b>	CDLx10	4 pcs	
18066	<b>PA34VD20</b>	CDLx15 / CDLx20 / CDLx25 / CDLx30	6 pcs	


Accessories - vertical mounting



Note! The air curtain must be secured in the wall or ceiling.

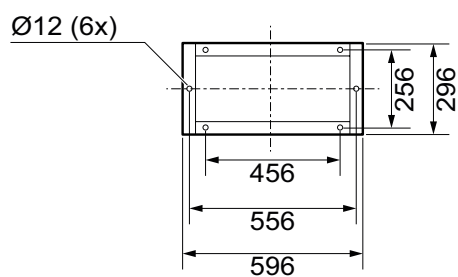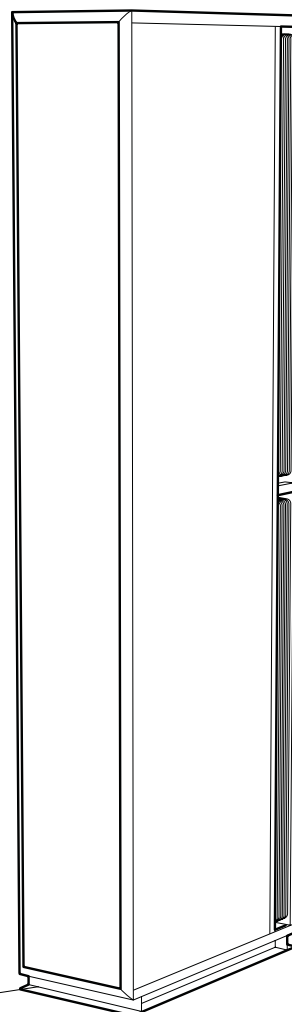

AXP300



CDLFF

Item number	Type
FE10398	CDLFF
10028	AXP300

## Accessories



DTV200S


Item number	Type	Length
17597	DTV200S*	

\*) See separate manual.

## Valve systems

Item number	Type	DN	Flow range [l/s]
238293	VPFC15LF	DN15	0,012-0,068
238294	VPFC15NF	DN15	0,024-0,13
238295	VPFC20	DN20	0,058-0,32
238296	VPFC25	DN25	0,10-0,60
238297	VPFC32	DN32	0,22-1,03

See separate manual.

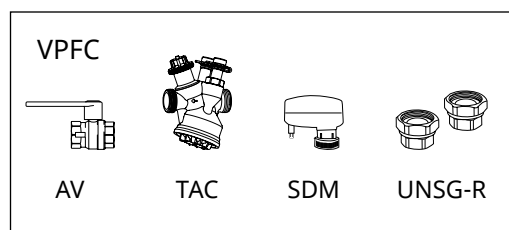


Item number	Type	L [mm]
459330	WCK8	1000
459331	WCK9	350



WCK

Item number	Type	Dimension
333344	UNSG2015	G20 x 15mm
333345	UNSG2518	G25 x 18mm
333346	UNSG2522	G25 x 22mm
333347	UNSG3228	G32 x 28mm
333348	UNSG4035	G40 x 35mm
333349	ANS1515	R15
333350	ANS2018	R20
333351	ANS2022	R20
333352	ANS2528	R25
333353	ANS3235	R32







UNSG



ANS




## Control systems

The air curtain must be supplemented with a control system.

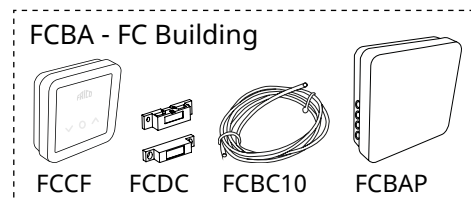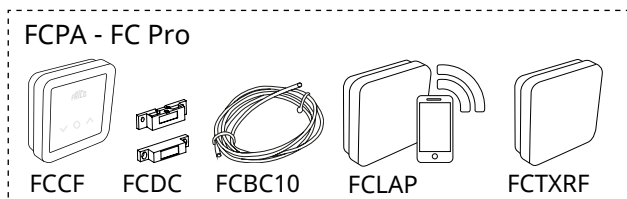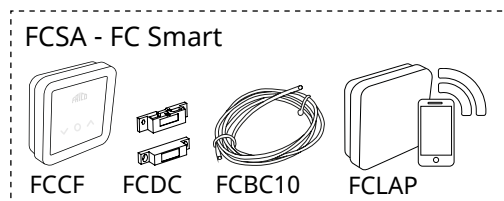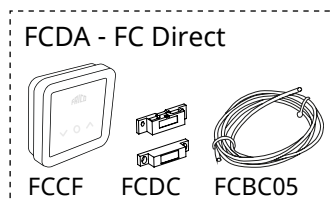


Item number	Type	Name	Dimensions
74684	<b>FCDA</b>	FC Direct	89x89x26 mm (FCCF)
74685	<b>FCSA</b>	FC Smart	89x89x26 mm (FCCF)
74686	<b>FCPA</b>	FC Pro	89x89x26 mm (FCCF)
74687	<b>FCBA</b>	FC Building	89x89x26 mm (FCCF)

## Accessories

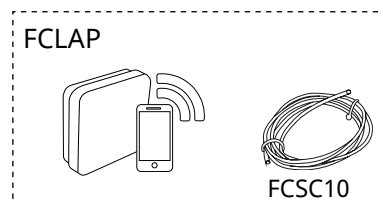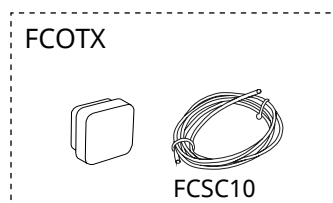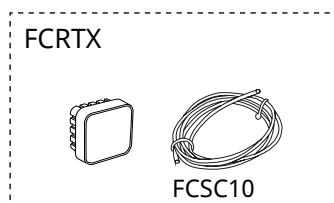

Item number	Type	Dimensions
74694	<b>FCRTX</b>	39x39x23 mm
74695	<b>FCOTX</b>	39x39x23 mm
74699	<b>FCLAP</b>	89x89x26 mm
74702	<b>FCWTA</b> for water heated units	
17495	<b>FCDC</b>	
74718	<b>FCBC05</b>	5 m
74719	<b>FCBC10</b>	10 m
74720	<b>FCBC25</b>	25 m
74721	<b>FCSC10</b>	10 m
74722	<b>FCSC25</b>	25 m
74703	<b>FCTXRF</b> for FC Smart, FC Pro	89x89x26 mm

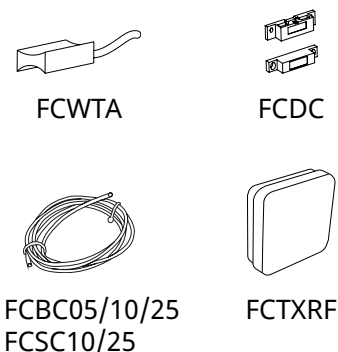

See separate manual for FC.

## Technical specifications Cordilla 3500

### 🌀 Ambient, no heat - CDL35 A (IP20)

Type	Output [kW]	Airflow* <sup>1</sup> [m <sup>3</sup> /h]	Sound power* <sup>2</sup> [dB(A)]	Sound pressure* <sup>3</sup> [dB(A)]	Length [mm]	Weight [kg]
CDL3510A	0	1250/2000	77	49/61	1000	52
CDL3515A	0	1850/3000	79	51/63	1500	69
CDL3520A	0	2500/4000	79	51/63	2000	86
CDL3525A	0	3100/5000	81	53/65	2500	100
CDL3530A	0	4200/6800	81	53/65	3000	115

### ⚡ Electrical heat - CDL35 E (IP20)

Type	Output steps [kW]	Airflow* <sup>1</sup> [m <sup>3</sup> /h]	$\Delta t$ * <sup>4</sup> [°C]	Sound power* <sup>2</sup> [dB(A)]	Sound pressure* <sup>3</sup> [dB(A)]	Voltage [V] Amperage [A] (heat)	Length [mm]	Weight [kg]
CDL3510E09	3/6/9	1200/1900	22/14	77	49/61	400V3~/13,0	1000	59
CDL3515E12	4/8/12	1750/2850	20/13	79	51/63	400V3~/17,3	1500	77
CDL3520E18	6/12/18	2350/3800	23/14	79	51/63	400V3~/26,0	2000	98
CDL3525E18	6/12/18	2950/4750	18/11	81	53/65	400V3~/26,0	2500	118
CDL3530E30	10/20/30	4100/6600	22/14	81	53/65	400V3~/43,3	3000	133

### 💧 Water heat - CDL35 WL (IP20)

Type	Output* <sup>5</sup> [kW]	Airflow* <sup>1</sup> [m <sup>3</sup> /h]	$\Delta t$ * <sup>4,5</sup> [°C]	Water volume [l]	Sound power* <sup>2</sup> [dB(A)]	Sound pressure* <sup>3</sup> [dB(A)]	Length [mm]	Weight [kg]
CDL3510WL	11	1200/1900	19/17	1,9	77	48/61	1000	60
CDL3515WL	17	1750/2850	22/18	2,0	79	50/63	1500	80
CDL3520WL	21	2350/3800	20/16	2,8	79	50/63	2000	100
CDL3525WL	31	2950/4750	23/19	3,6	81	52/65	2500	120
CDL3530WL	35	4100/6600	18/15	5,9	81	52/65	3000	140

### 💧 Water heat - CDL35 WLL (IP20)

Type	Output* <sup>6</sup> [kW]	Airflow* <sup>1</sup> [m <sup>3</sup> /h]	$\Delta t$ * <sup>4,6</sup> [°C]	Water volume [l]	Sound power* <sup>2</sup> [dB(A)]	Sound pressure* <sup>3</sup> [dB(A)]	Length [mm]	Weight [kg]
CDL3510WLL	6,9	1200/1900	12/11	2,7	77	48/61	1000	62
CDL3515WLL	12	1750/2850	14/12	4,2	79	50/63	1500	83
CDL3520WLL	16	2350/3800	14/13	5,7	79	50/63	2000	104
CDL3525WLL	19	2950/4750	13/12	7,2	81	52/65	2500	126
CDL3530WLL	25	4100/6600	13/11	8,7	81	52/65	3000	146

\*<sup>1</sup>) Low/high airflow (2/10V).

\*<sup>2</sup>) Sound power ( $L_{WA}$ ) measurements according to ISO 27327-2: 2014, Installation type E.

\*<sup>3</sup>) Sound pressure ( $L_{pA}$ ). Conditions: Distance to the unit 5 metres. Directional factor: 2. Equivalent absorption area: 200 m<sup>2</sup>. At low/high airflow (2/10V).

\*<sup>4</sup>)  $\Delta t$  = temperature rise of passing air at maximum heat output and low/high airflow (2/10V).

\*<sup>5</sup>) Applicable at water temperature 60/40 °C, air temperature, in +18 °C.

\*<sup>6</sup>) Applicable at water temperature 40/30 °C, air temperature, in +18 °C.

\*<sup>5,6</sup>) See [www.frico.net](http://www.frico.net) for additional calculations.



Approved for 220V/1ph/60Hz and 380V/3ph/60Hz. Product performance for 220V/1ph/60Hz and 380V/3ph/60Hz will differ from stated data.

Type	Voltage motor: 230V~	
	Motor [W]	Amperage motor [A]
CDL3510	350	2,3
CDL3515	520	3,2
CDL3520	700	4,1
CDL3525	870	5,1
CDL3530	1230	6,9

## Technical specifications Cordilla 4500

### 🌀 Ambient, no heat - CDL45 A (IP20)

Type	Output [kW]	Airflow* <sup>1</sup> [m <sup>3</sup> /h]	Sound power* <sup>2</sup> [dB(A)]	Sound pressure* <sup>3</sup> [dB(A)]	Length [mm]	Weight [kg]
CDL4510A	0	1750/2800	79	51/63	1000	56
CDL4515A	0	2400/3800	81	53/65	1500	73
CDL4520A	0	3450/5600	81	53/65	2000	90
CDL4525A	0	4100/6600	83	55/67	2500	104
CDL4530A	0	4650/7500	83	55/67	3000	129

### ⚡ Electrical heat - CDL45 E (IP20)

Type	Output steps [kW]	Airflow* <sup>1</sup> [m <sup>3</sup> /h]	Δt* <sup>4</sup> [°C]	Sound power* <sup>2</sup> [dB(A)]	Sound pressure* <sup>3</sup> [dB(A)]	Voltage [V] Amperage [A] (heat)	Length [mm]	Weight [kg]
CDL4510E15	5/10/15	1650/2700	27/17	79	51/63	400V3~/21,7	1000	63
CDL4515E23	7,5/15/23	2200/3600	31/19	81	53/65	400V3~/32,5	1500	81
CDL4520E30	10/20/30	3250/5300	28/17	81	53/65	400V3~/43,3	2000	102
CDL4525E32	11/21/32	3900/6300	24/15	83	55/67	400V3~/46,2	2500	122
CDL4530E32	11/21/32	4450/7200	21/13	83	55/67	400V3~/46,2	3000	137

### 💧 Water heat - CDL45 WL (IP20)

Type	Output* <sup>5</sup> [kW]	Airflow* <sup>1</sup> [m <sup>3</sup> /h]	Δt* <sup>4,5</sup> [°C]	Water volume [l]	Sound power* <sup>2</sup> [dB(A)]	Sound pressure* <sup>3</sup> [dB(A)]	Length [mm]	Weight [kg]
CDL4510WL	10	1650/2700	14/11	1,9	79	50/63	1000	64
CDL4515WL	20	2200/3600	20/16	3,0	81	52/65	1500	84
CDL4520WL	29	3250/5300	20/16	4,2	81	52/65	2000	104
CDL4525WL	36	3900/6300	21/17	5,3	83	54/67	2500	124
CDL4530WL	37	4450/7200	18/15	5,9	83	54/67	3000	160

### 💧 Water heat - CDL45 WLL (IP20)

Type	Output* <sup>6</sup> [kW]	Airflow* <sup>1</sup> [m <sup>3</sup> /h]	Δt* <sup>4,6</sup> [°C]	Water volume [l]	Sound power* <sup>2</sup> [dB(A)]	Sound pressure* <sup>3</sup> [dB(A)]	Length [mm]	Weight [kg]
CDL4510WLL	8,0	1650/2700	9/10	2,7	79	50/63	1000	66
CDL4515WLL	14	2200/3600	13/12	4,2	81	52/65	1500	87
CDL4520WLL	20	3250/5300	13/11	5,7	81	52/65	2000	108
CDL4525WLL	24	3900/6300	13/11	7,2	83	54/67	2500	130
CDL4530WLL	29	4450/7200	14/12	8,7	83	54/67	3000	150

\*<sup>1</sup>) Low/high airflow (2/10V).

\*<sup>2</sup>) Sound power ( $L_{WA}$ ) measurements according to ISO 27327-2: 2014, Installation type E.

\*<sup>3</sup>) Sound pressure ( $L_{pA}$ ). Conditions: Distance to the unit 5 metres. Directional factor: 2. Equivalent absorption area: 200 m<sup>2</sup>. At low/high airflow (2/10V).

\*<sup>4</sup>) Δt = temperature rise of passing air at maximum heat output and low/high airflow (2/10V).

\*<sup>5</sup>) Applicable at water temperature 60/40 °C, air temperature, in +18 °C.

\*<sup>6</sup>) Applicable at water temperature 40/30 °C, air temperature, in +18 °C.


\*<sup>5,6</sup>) See [www.frico.net](http://www.frico.net) for additional calculations.



Approved for 220V/1ph/60Hz and 380V/3ph/60Hz. Product performance for 220V/1ph/60Hz and 380V/3ph/60Hz will differ from stated data.

Type	Voltage motor: 230V~	
	Motor [W]	Amperage motor [A]
CDL4510	520	3,2
CDL4515	700	4,1
CDL4520	1050	6,0
CDL4525	1230	6,9
CDL4530	1400	8,1


CDL A

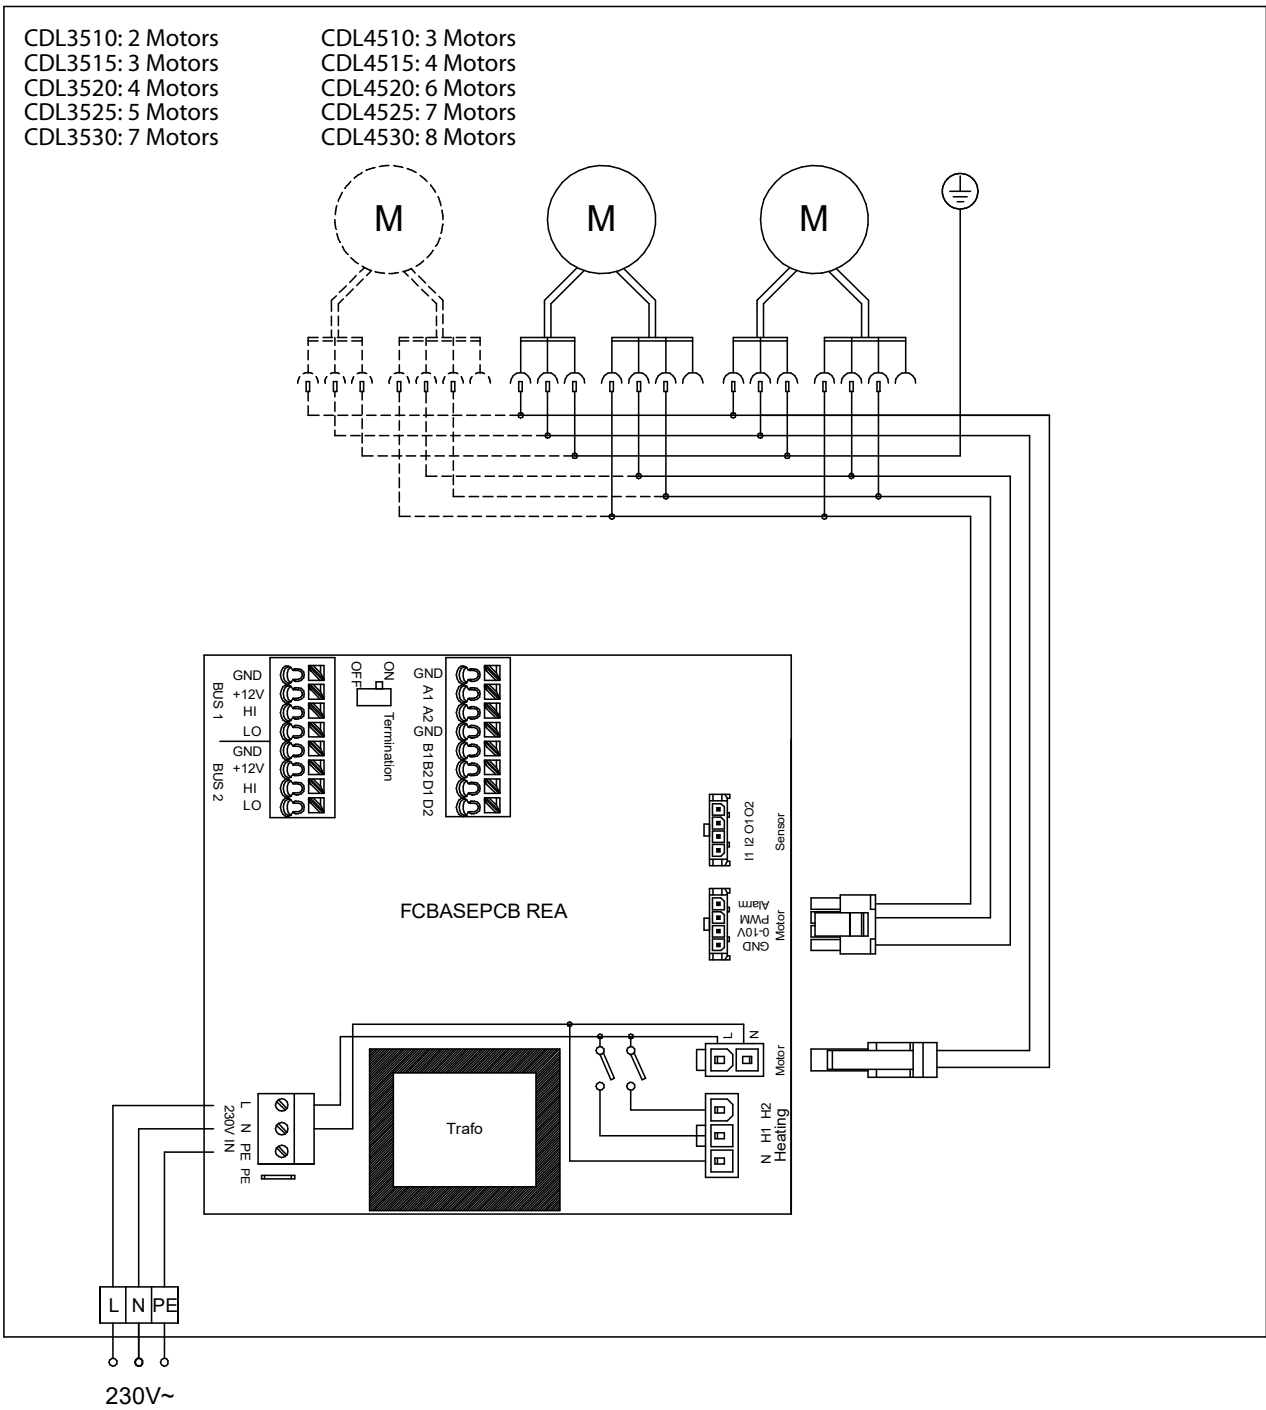

Wiring diagrams for control system in the FC manual.




CDL E

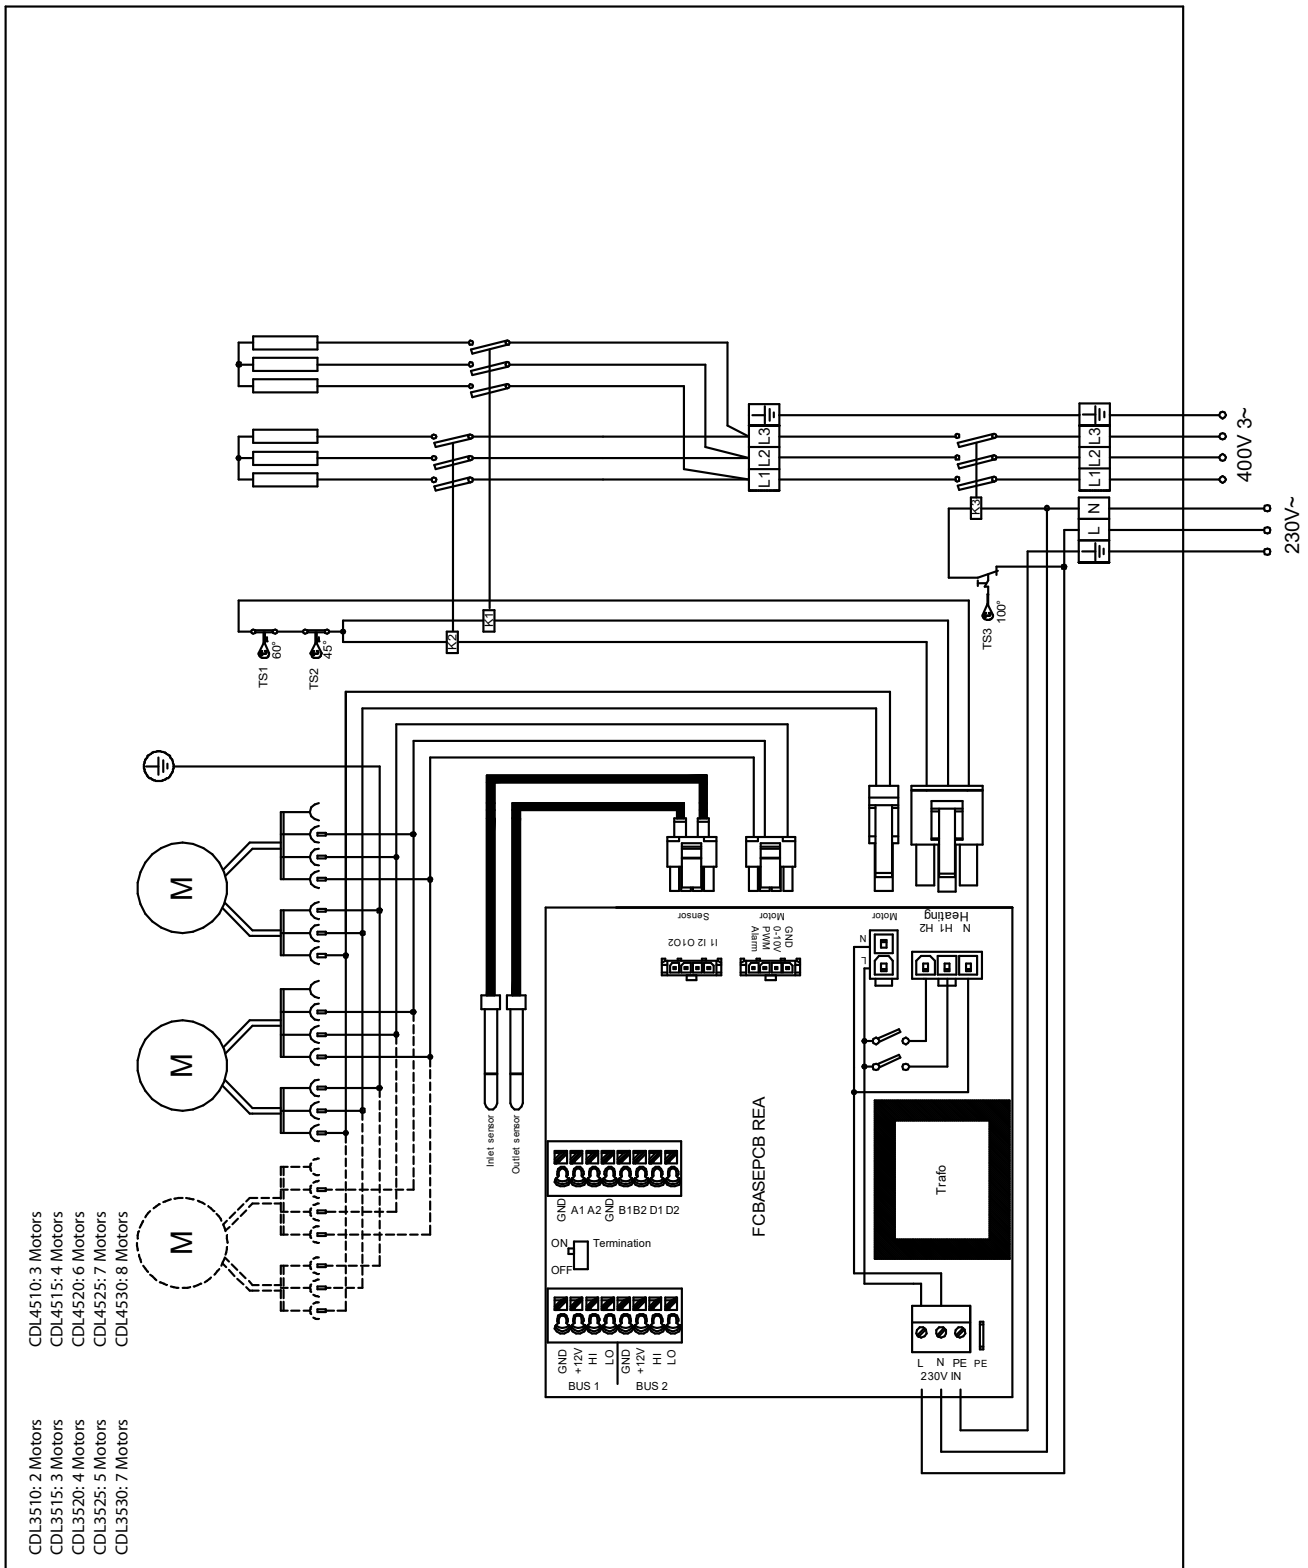

Wiring diagrams for control system in the FC manual.

CDL W

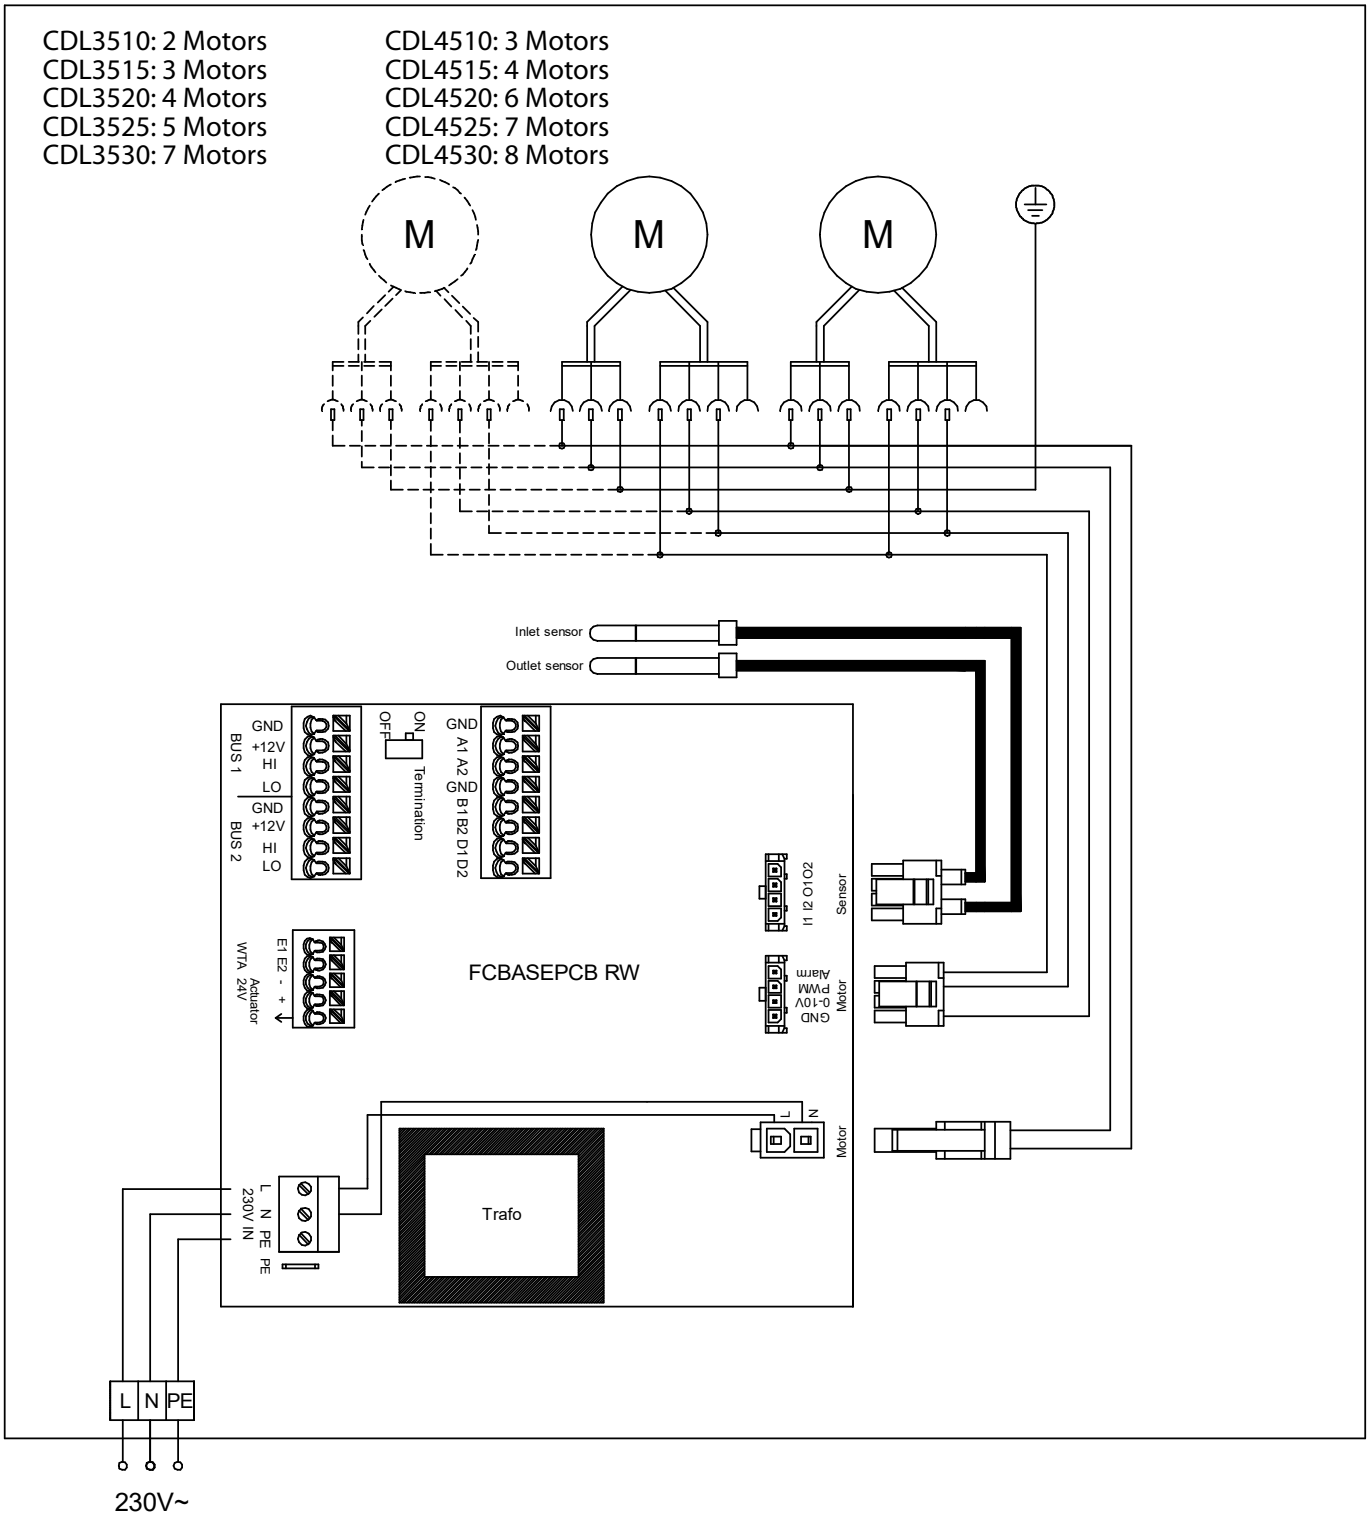

Wiring diagrams for control system in the FC manual.

## Installation and operating instructions

### General Instructions

Read these instructions carefully prior to installation and use. Keep this manual for future reference.

*The product may only be used as set out in the assembly and operating instructions. The guarantee is only valid should the product be used in the manner intended and in accordance with the instructions.*

### Application

Cordilla creates an efficient temperature dividing air barrier in door openings. The air curtain is ordered by using the product key and manufactured accordingly.

The recommended installation height of Cordilla 3500 is 3,5 m and the recommended installation height of Cordilla 4500 is 4,5 m. The recommended installation width of Cordilla 3500 is 5 m and the recommended installation width of Cordilla 4500 is 6,5 m, with air curtains on both sides of the opening. The air curtains are available in several versions: without heat (A), with electrical heating (E), or with water heating (WL/WLL).

Protection class: IP20.

### Operation

Air is drawn in at the top/rear of the unit and blown downwards/outwards shielding the door opening and minimizing heat loss. To achieve the optimum air curtain effect the unit must extend the full height/width of the door opening.

The grille for directing the outlet air is adjustable and is normally angled outwards to achieve the best protection against incoming air.

The efficiency of the air curtain depends on the air temperature, the pressure differential across the doorway and any wind load.

*NOTE! Negative pressure in the building considerably reduces the efficiency of the air curtain. The ventilation should therefore be balanced.*

### Mounting

The air curtain range can be adapted for vertical or horizontal installation. The units can also be installed by recessing into suspended ceilings.

The product must be mounted in such a way



The power supply to the unit must be disconnected during all service, repair and maintenance work.

as to allow future service and maintenance. Ensure that the front panel/service hatch is accessible and can be fully opened.

### Horizontal mounting

The air curtain is installed horizontally with the outlet air grille facing downwards as close to the door as possible. Minimum distance from outlet to floor for electrically heated units is 1800 mm. For other minimum distances, see fig. 2.

For the protection of wider openings, several units can be mounted directly next to each other. This must be specified when ordering, as the air curtains' end gables will be prepared with holes to enable to join the air curtains together.

Design covers are available for special order.

#### Mounting with wall brackets

Wall brackets PAWBL are available as accessories.

1. Remove the plastic covers on the wall brackets. (Fig. 7A)
2. Mount the brackets on the wall according to the dimensions fig. 7B.
3. Fasten the hammerhead screws on the unit in the holes M8. (Fig. 7C)
4. Lock the nuts so that the hammerhead screws are at 20 mm height. Note the direction of the screw heads. (Fig. 7C)
5. Slide the unit on the consoles. (Fig. 7D)
6. Lock the nuts against the bracket and return the plastic covers. (Fig. 7E)

#### Horizontal mounting on the ceiling

Threaded rods, wire suspension kits and ceiling brackets for ceiling mounting are available as accessories, see fig. 8 and 9 and separate manuals.

#### Horizontal recessed mounting in false ceilings

The air curtain can be ordered for recessed mounting in false ceilings, see the product key.

## Vertical mounting

The air curtain is mounted vertically as close as possible to the door. For the best effect air curtains should be placed on both sides of the opening.

For vertical mounting, the unit must be supplemented with a floor frame CDLFF, ordered separately. Attach the frame horizontally to the floor using fasteners appropriate for the surface. The floor frame is premounted on the air curtain at delivery and painted in the same colour as the air curtain.

The position of the air curtain (to the left or to the right of the opening) must be specified when ordering, see the product key.

Two units can be mounted directly on top of each other. This must be specified when ordering, as the air curtains' end gables will be prepared with holes to enable to join the air curtains together.

The air curtain can be ordered for recessed mounting, see the product key.

Note! The air curtain must be secured in the wall or ceiling. There are four holes (M8) on top of the unit for this purpose. Any unused holes should be covered, e.g. with screws. Fasteners are not included.

Design covers are available for special order.

## Opening the unit

1. Disconnect the power supply.
2. Remove the inlet grille from its snap locks e.g. with a flat screwdriver. The grille is attached to the air curtain by strings preventing it to fall. Fig.1.
3. Loosen the screws fixing the service hatch and swing it opened.
4. To close the unit, close and fasten the service hatch with the screws and fasten the grille in the snap locks.

## Electrical installation

The installation, which should be preceded by an isolator switch with a contact separation of at least 3 mm, should only be wired by a competent electrician and in accordance with the latest edition of IEE wiring regulations.

The air curtain has an integrated PC board which is connected to the selected external control system FC. FC must be ordered separately.

The PC board is mounted on a hatch inside the unit. Open and pull out the hatch to access the PC board. See Fig. 3a. The hatch is equipped with glands and is located on the top or the side of the unit according to your order, see the product key. Communication and sensor cables

are connected to the PC board. For vertical units where the connection is made from below (VL-C/VR-D), the PC board is placed in a box in the upper part of the unit. The box is equipped with glands. Open the service hatch and pull out the box to access the PC board. See Fig. 3b. Make sure to use cables long enough as they are drawn within the unit.

Settings are made on the FC control panel. Should more than one air curtain be controlled by a single FC, an additional communication cable FCBC per unit will be required. See manual for FC.

Control is supplied by 230V~ to terminal blocks placed inside the unit, accessible via a gland placed according to your order, see the product key. For units with electrical heating, the power supply (400V3~) is connected to terminal blocks in the same area. Connections made from below the unit must be prepared in the floor according to the drawing. See wiring diagrams, table of cable diameter and fig.4.

## Start-up (E)

When the unit is used for the first time or after a long period of non-use, smoke or an odour may result from dust or dirt which has collected on the element. This is completely normal and disappears after a short time.

## Connecting the water coil (W)

The installation must be carried out by an authorised installer.

The water coil has copper tubes with aluminium fins and is suitable for connection to a closed water heating system. The heating coil must not be connected to a mains pressure water system or an open water system.

Note that the unit shall be preceded by a regulating valve, see Frico valve kit.

The water coil is connected via connections DN20 (3/4"), inside thread. The connections are placed on the air curtain according to your order, see the product key. Connections made from below the unit must be prepared in the floor according to the drawing. Note the distance between the water connections and the end of the unit. See Fig. 6. Flexible hoses are available as accessories.



NOTE: Care must be taken when connecting the pipes. Use a pipe wrench or a similar tool to grip the air curtain connections to prevent straining of the pipes and subsequent water leakage during connection to the water supply pipe-work.

The connections to the heating coil must be equipped with shut off valves to allow trouble-free removal.

The water coils in vertical units are equipped with air valves. Air valves are not included for horizontal units. An air valve should be connected at a high point in the pipe system.

### Adjustment of the air curtain and airflow

The direction and speed of the airflow should be adjusted considering the load on the opening. Pressure forces affect the airstream and force it inwards towards the premises (when the premises are heated and the outdoor air is cold).

The airstream should, therefore, be directed outwards to withstand the load. Generally speaking, the higher the load, the greater the angle required.

### Basic setting fan speed

The fan speed when the door is open is set using the control. Note that the airflow direction and the fan speed may need fine adjustment depending on the loading of the door.

### Filter (W)

The heat coil fin distance, in combination with the hole diameter of the intake grille, protects against dirt and blockage and makes a separate filter unnecessary.

### Maintenance

Since fan motors and other components are maintenance-free, no maintenance other than cleaning is necessary. The level of cleaning can vary depending on local conditions. Undertake cleaning at least twice a year. Inlet and exhaust grilles, impeller and elements can be vacuum cleaned or wiped using a damp cloth. Use a brush when vacuuming to prevent damaging sensitive parts. Avoid the use of strong alkaline or acidic cleaning agents.

### Temperature control

Temperature control of FC maintains the exhaust temperature. Should the temperature exceed the preset value, the overheating alarm will activate. For more information see the FC manual.

### Overheating

The air curtain unit with electrical heating is equipped with an overheat protection. If it is deployed due to overheating, reset as follows:

1. Disconnect the power supply with the isolator switch.
2. Allow the electrical coil to cool.
3. Determine the cause of overheating and

rectify the fault.

4. Check if the manual overheating protection inside the unit has deployed. If this is the case, reset it by pushing the button. Fig.5.
5. Reconnect the unit.

### Replacing the electrical coil (E)

1. Mark and disconnect the cables to the electric coil.
2. Remove the mounting screws securing the electric coil in the unit and lift out.
3. Replace faulty electrical coil.
4. Install the new electric coil in reverse order to the above.

### Replacing the water coil (W)

1. Shut off the water supply to the unit.
2. Disconnect the connections to the water coil.
3. Remove the mounting screws securing the coil in the unit and lift out.
4. Install the new coil in reverse order to the above.

### Safety cut-out

All motors are equipped with an integrated safety cut-out. This will operate, stopping the air curtain should the motor temperature rise excessively or the electronics fail or overheat. The cut-out will automatically reset when the motor temperature has returned to within the motor's operating limits. Failure or damage to electronics components may require repair or replacement of such components or the entire product.

### Fan replacement

1. Determine which of the fans is not functioning.
2. Disconnect the cables from the relevant fan.
3. Remove the screws securing the fan and lift the fan out.
4. Install the new fan as above in reverse order.

### Replacing the PC board

1. The PC board is mounted on a hatch inside the unit. Open and pull out the hatch to access the PC board. The hatch is equipped with glands and is located on the top or the side of the unit according to your order, see the product key.
2. Mark and disconnect the cables to the PC board.
3. Unhatch the board from its PCB snap-in spacers and lift out.
4. Install the new PC board as above in reverse order.

## Troubleshooting

*If the fans are not running or do not perform properly, check the following:*

- The power supply.
- That the intake grille/filter is not dirty.
- That the motor's safety cut-out has not been deployed.
- Functions and settings of the FC control system, see the FC manual.

*If there is no heat, check the following:*

- Functions and settings of the FC control system, see the FC manual.

*For units with electrical heating, also check the following:*

- Power supply to electric heater coil; check fuses and circuit-breaker (if any).
- That the overheat protection has not been deployed.

*For units with a water coil, also check the following:*

- That the water coil is vented
- That there is sufficient water flow and pressure.
- That the incoming water is heated adequately.
- That the valves and the actuators are correctly installed and working.

If the fault cannot be rectified, please contact a qualified service technician.

## Residual current circuit breaker (E)

When the installation is protected by means of a residual current circuit breaker, which trips when the appliance is connected, this may be due to moisture in the heating element. When an appliance containing a heater element has not been used for a long period or stored in a damp environment, moisture can enter the element.

This should not be seen as a fault, but is simply rectified by connecting the appliance to the main supply via a socket without a safety cut-out so that the moisture can be eliminated from the element. The drying time can vary from a few hours to a few days. As a preventive measure, the unit should occasionally be run for a short time when it is not being used for extended periods of time.

## Packaging

Packaging materials are chosen with consideration to the environment and are therefore recyclable.

## Handling of product at end of working life

This product may contain substances necessary for the functionality of the product but potentially dangerous for the environment. The product should not be disposed of mixed with general household waste but delivered to a designated collection point for environmental recycling. Please contact the local authority for further details of your nearest designated collection point.

## Safety

- *For all installations of electrically heated products a residual current circuit breaker 300 mA for fire protection must be used.*
- *Keep the areas around the air intake and exhaust grilles free from possible obstructions!*
- *The unit must not be fully or partially covered as overheating can result in a fire risk!*
- *Lifting equipment must be used to lift the unit.*
- *This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.*
- *Children of less than 3 years should be kept away unless continuously supervised.*
- *Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.*
- *Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.*

**CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**









**Main office**

Frico AB  
Industrivägen 41  
SE-433 61 Sävedalen  
Sweden

Tel: +46 31 336 86 00  
mailbox@frico.se  
www.frico.net

**For latest updated information and information  
about your local contact: [www.frico.net](http://www.frico.net)**